ELEVATE CLICK SYSTEM
BEDSIDE / LAMP TABLE

Assembly Instructions

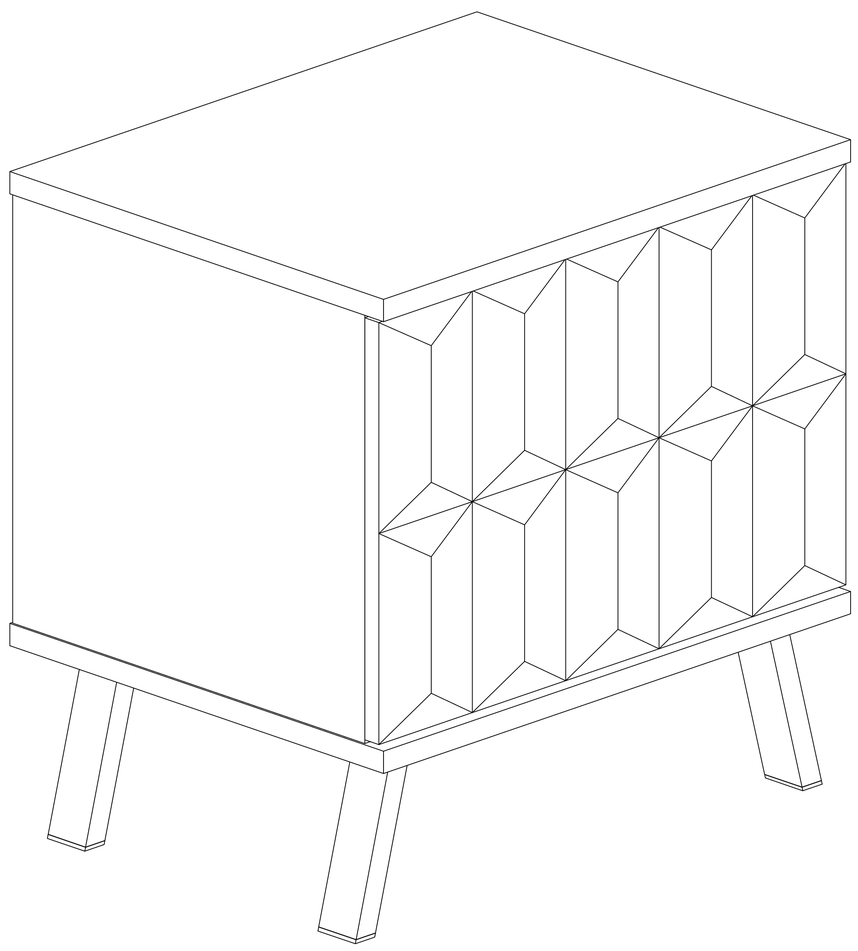

NOTE

We highly recommend watching the quick help & set up guide video first before assembling. Simply place a smart phone camera over the QR code for a quick link to the video.

To watch assembly video :
www.frankolsenfurniture.co.uk

Download the **Frank Olsen Smart app** from :
Google Play store or Apple store

HARDWARE

A M3*12  **x2**	**B** M3.5*14  **x8**	**C** M3.5*16  **x16**	**D** M4*25  **x4**	**E** 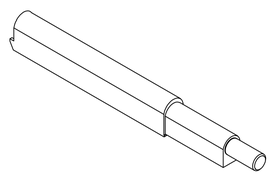 **x1**	**F** 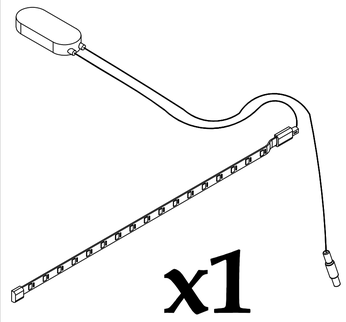 **x1**	**G** 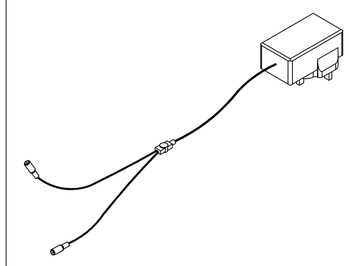 **x1**
H 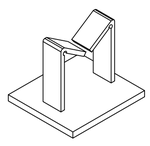 **x2**	**I** 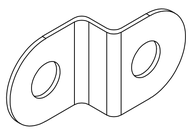 **x2**	**J** 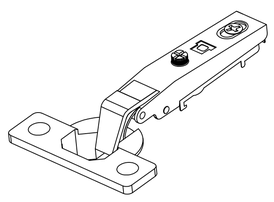 **x2**	**M** 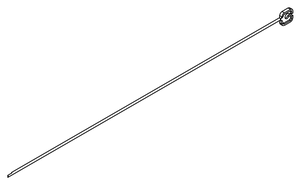 **x2**	**N**  **x4**	**Q** 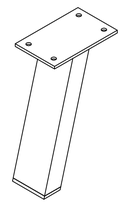 **x4**	

Tools Required-Not Supplied

PARTS

⚠ WARNING

CHOKING HAZARD
SMALL PARTS

PLEASE ASSEMBLE AWAY FROM CHILDREN & PETS

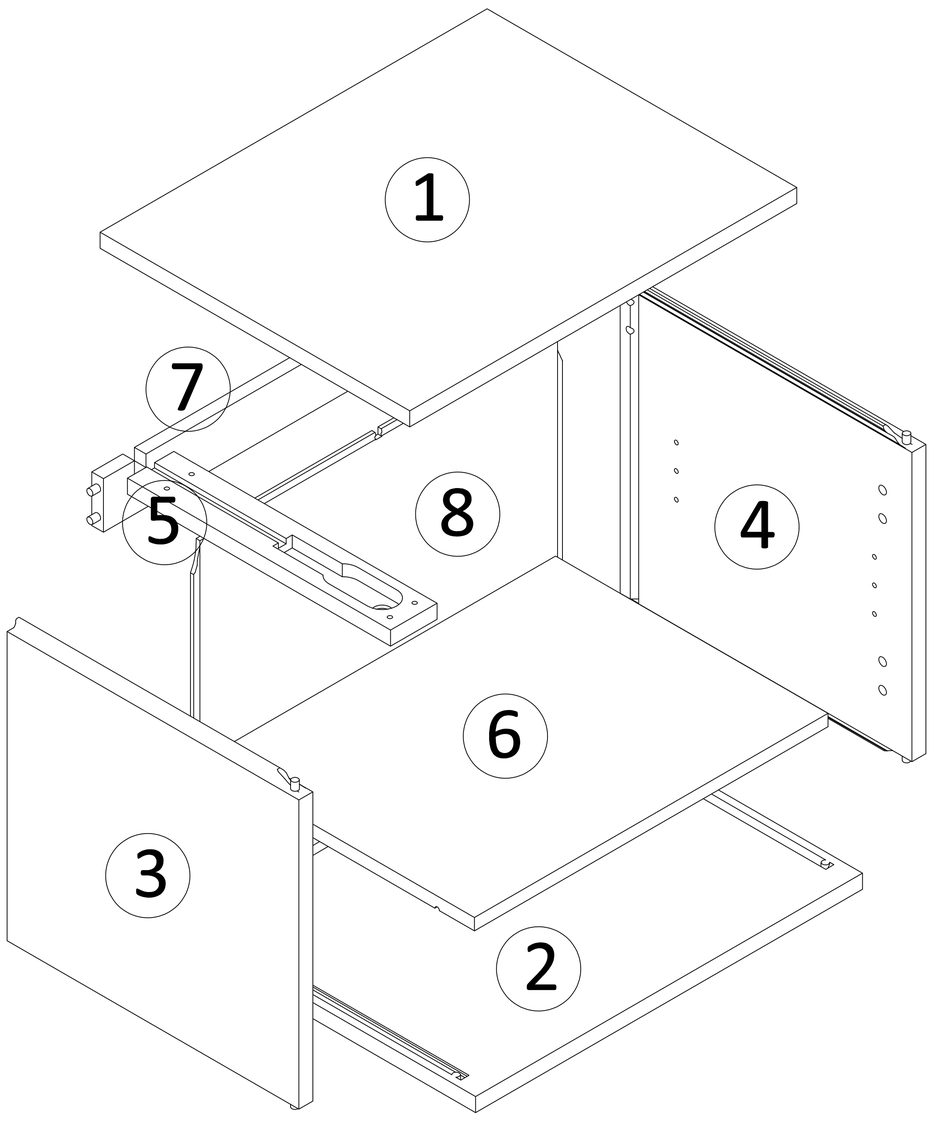

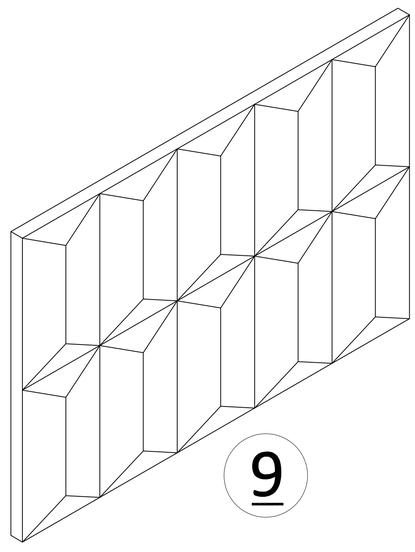

GUIDE

Assembly Instructions

Ensure dowel is aligned with hole before pushing panel into groove

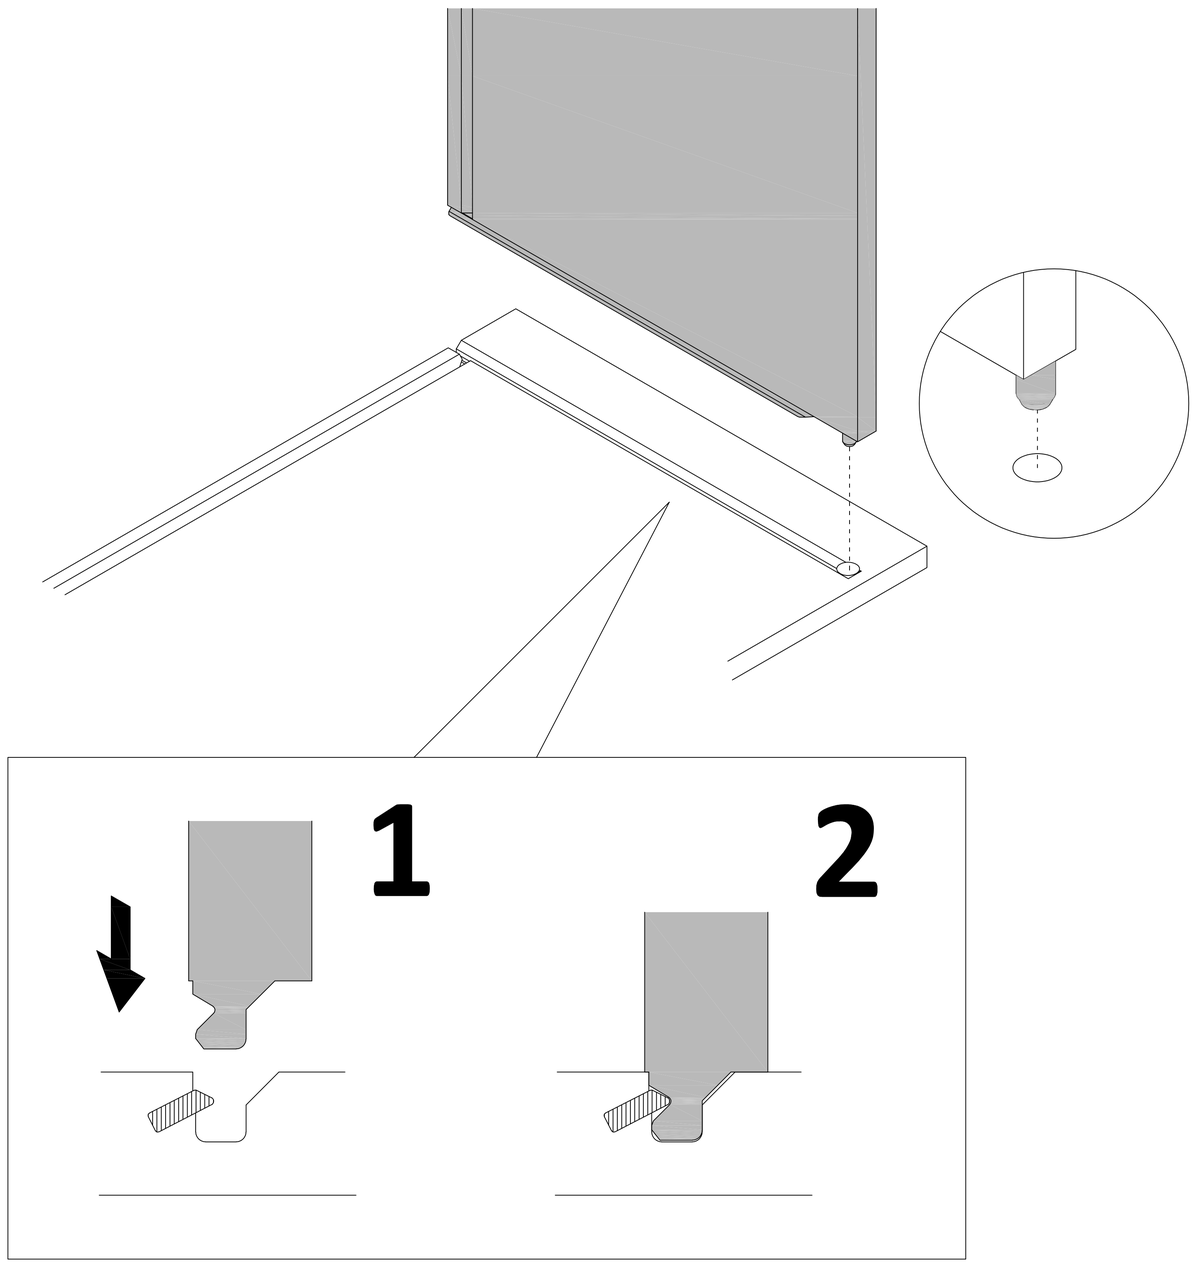

Disassembly Instructions

Use Disassemble rod ‘M’ and gently slide in to the small triangle as shown below marked ‘KEY’

We highly recommend watching the quick help video before disassembling. Simply place a phone camera over the QR code below for a quick link to the video

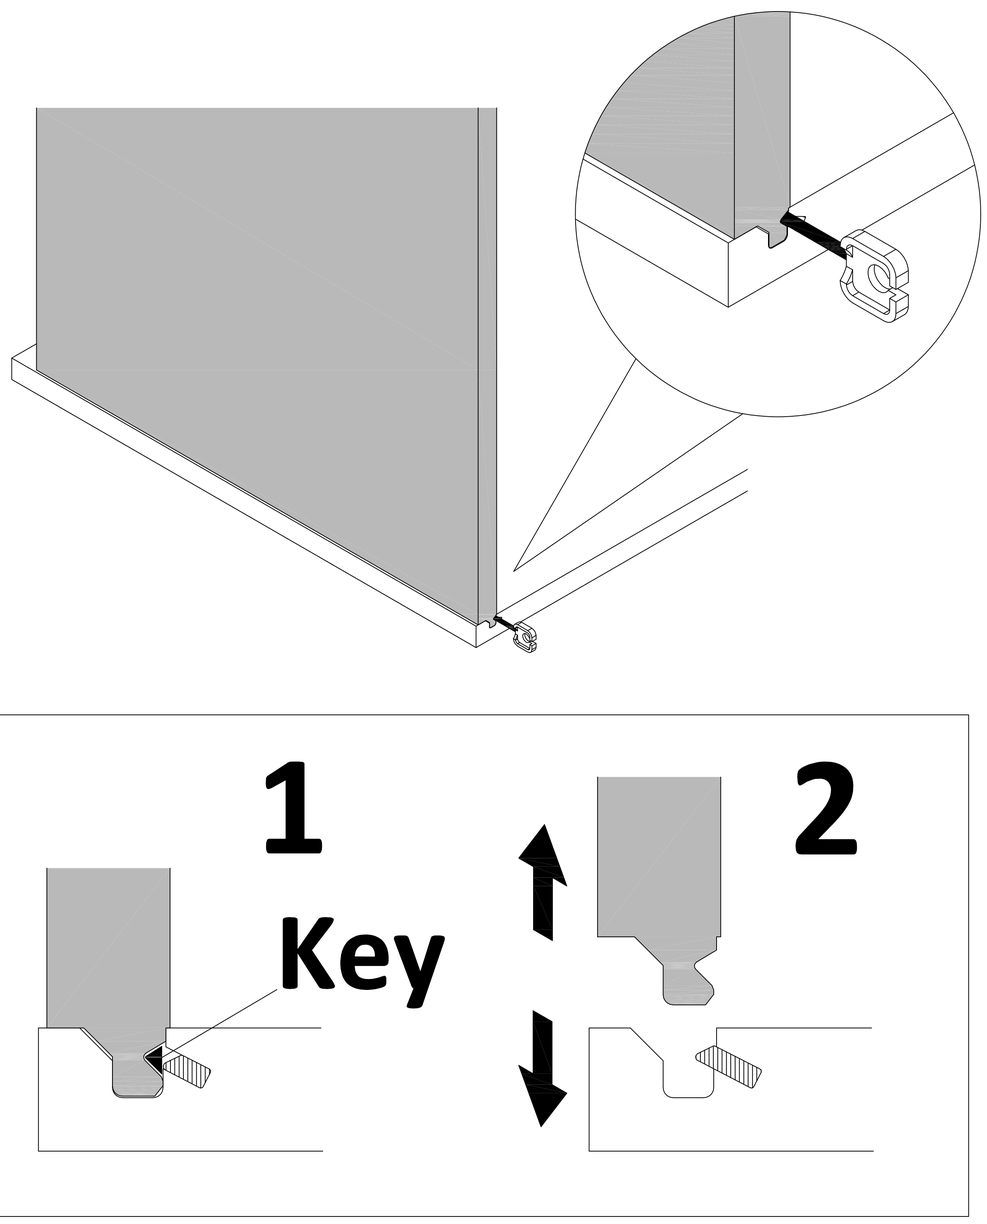

1

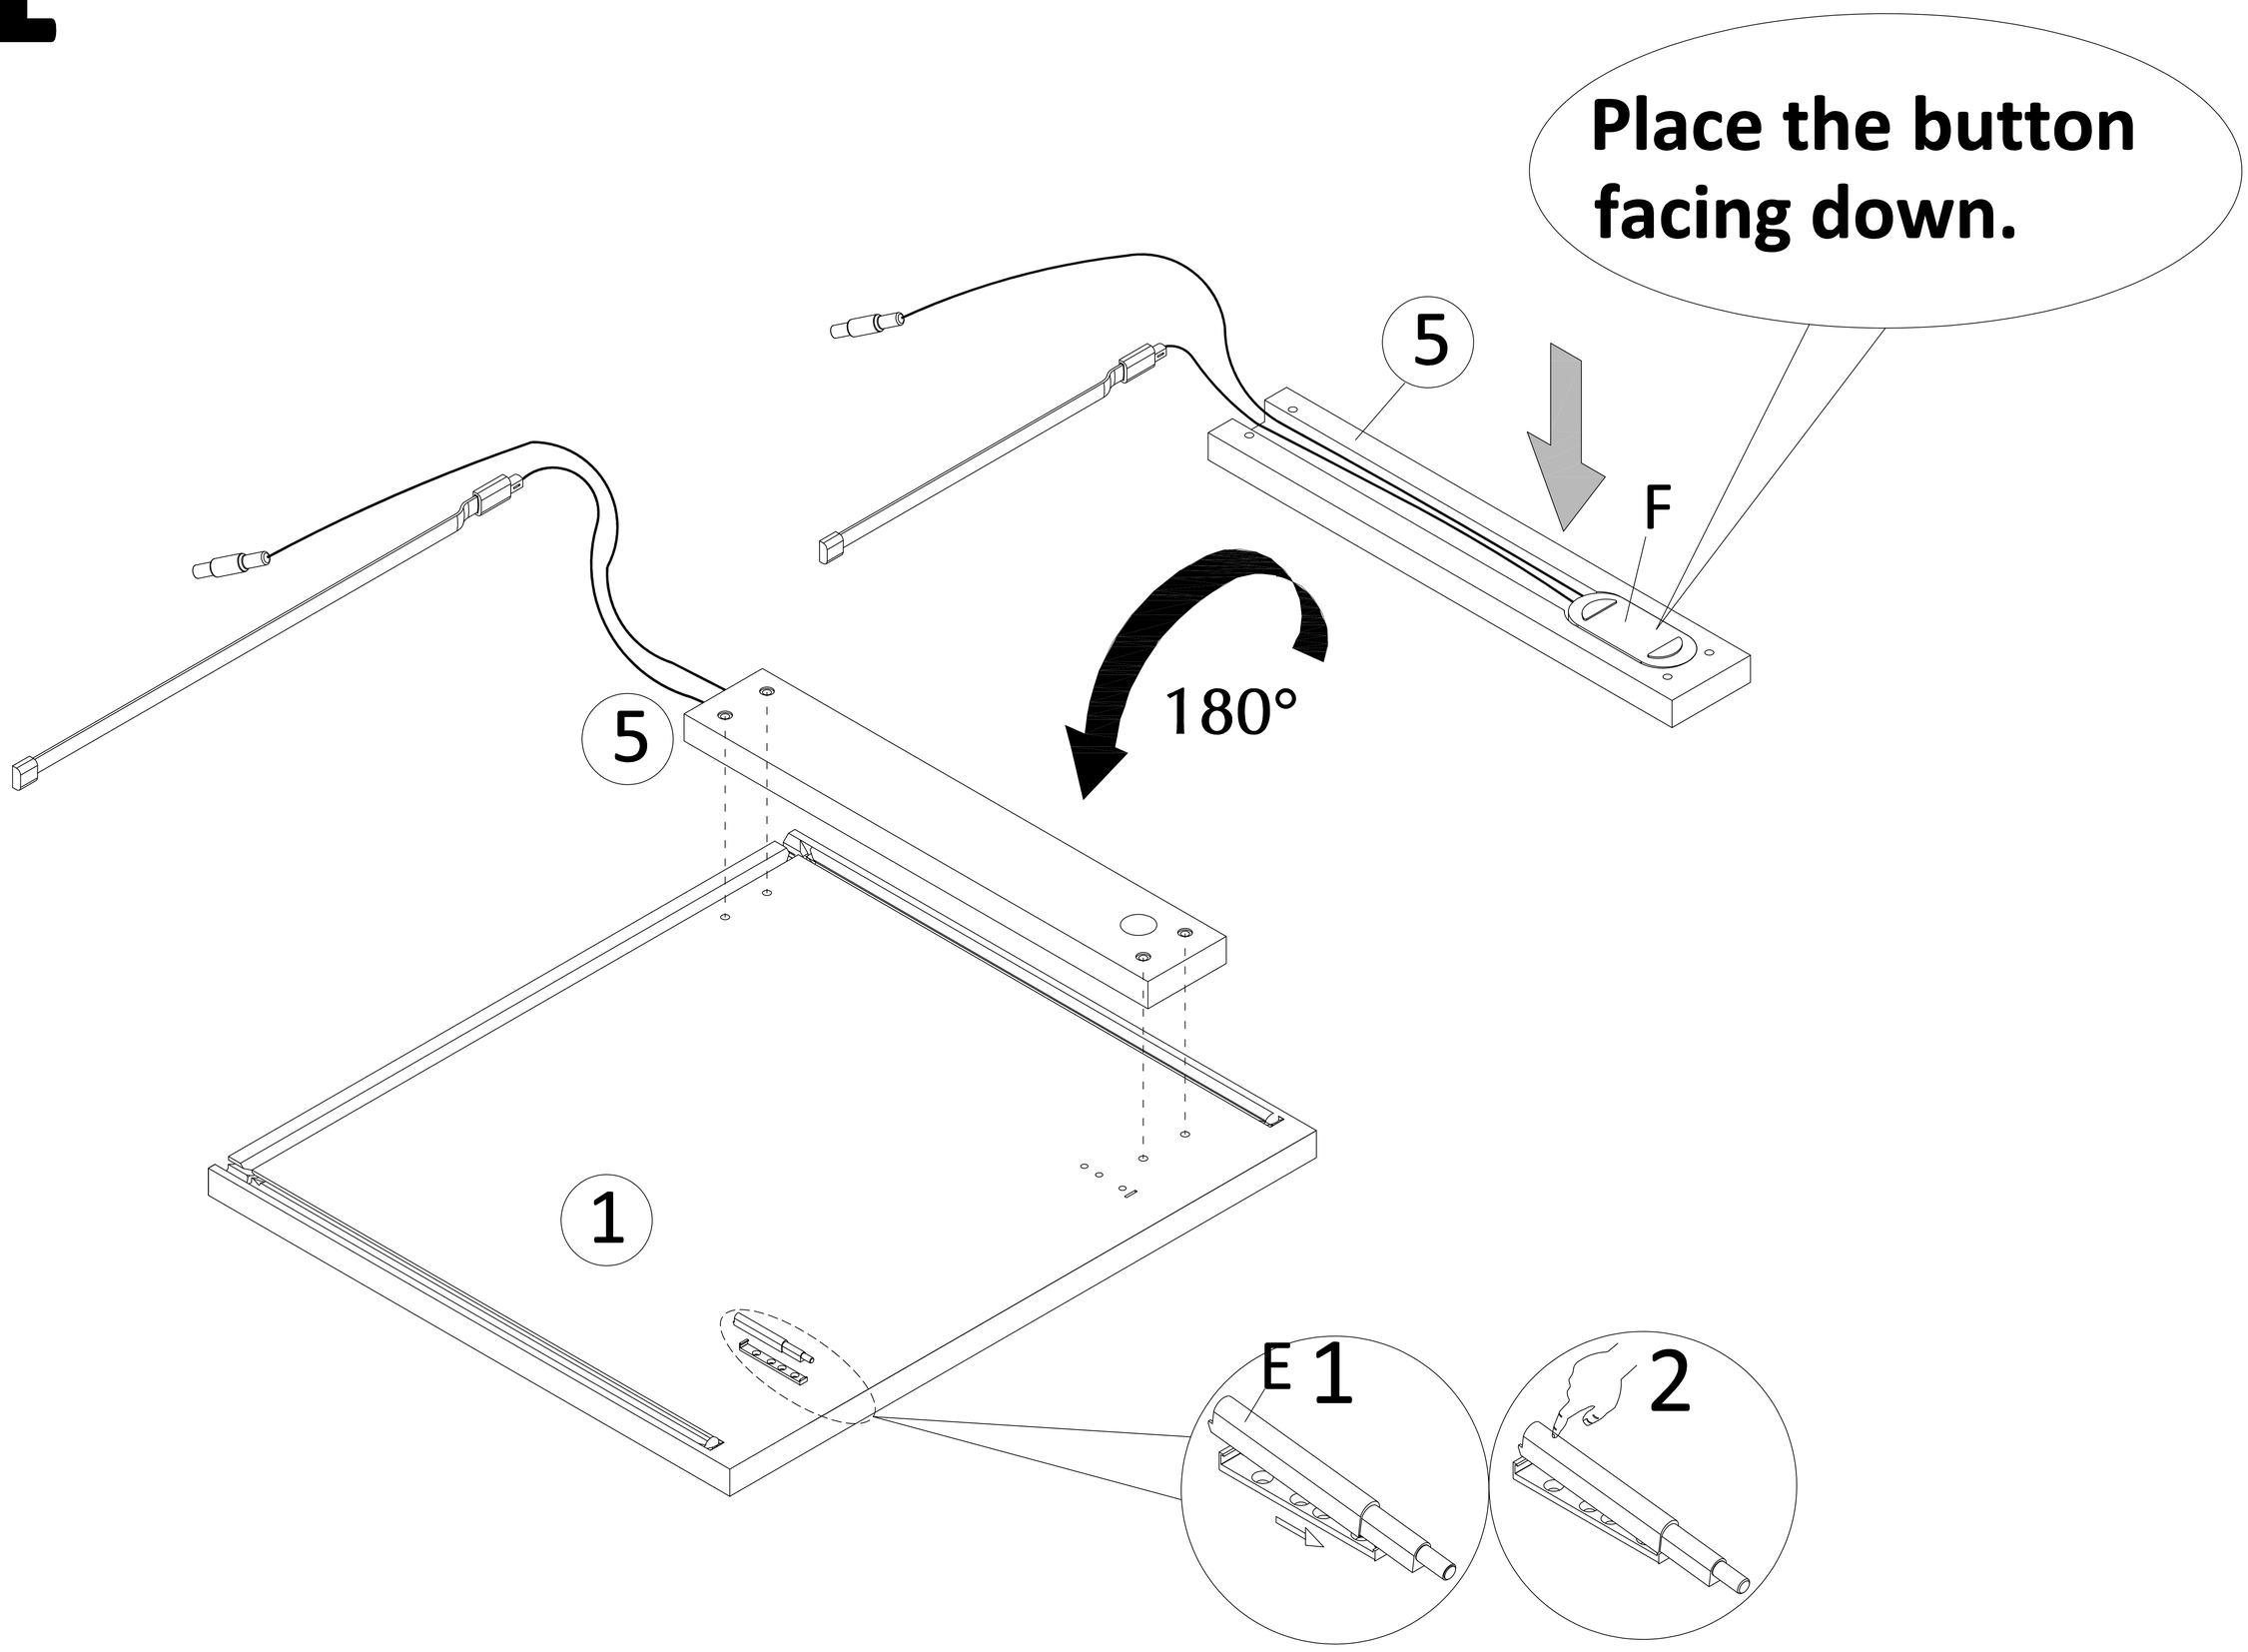
Place the button facing down.
5
F
180°
5
1
E 1
2

2

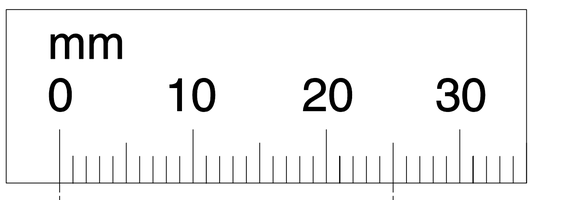
mm
0
10
20
30

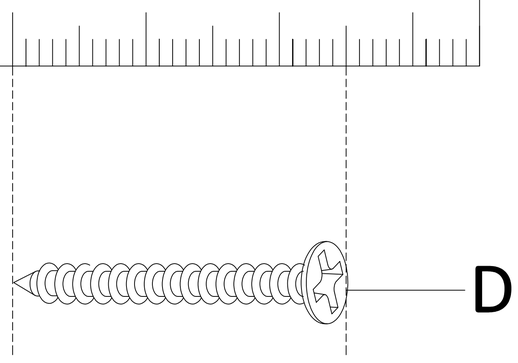
D

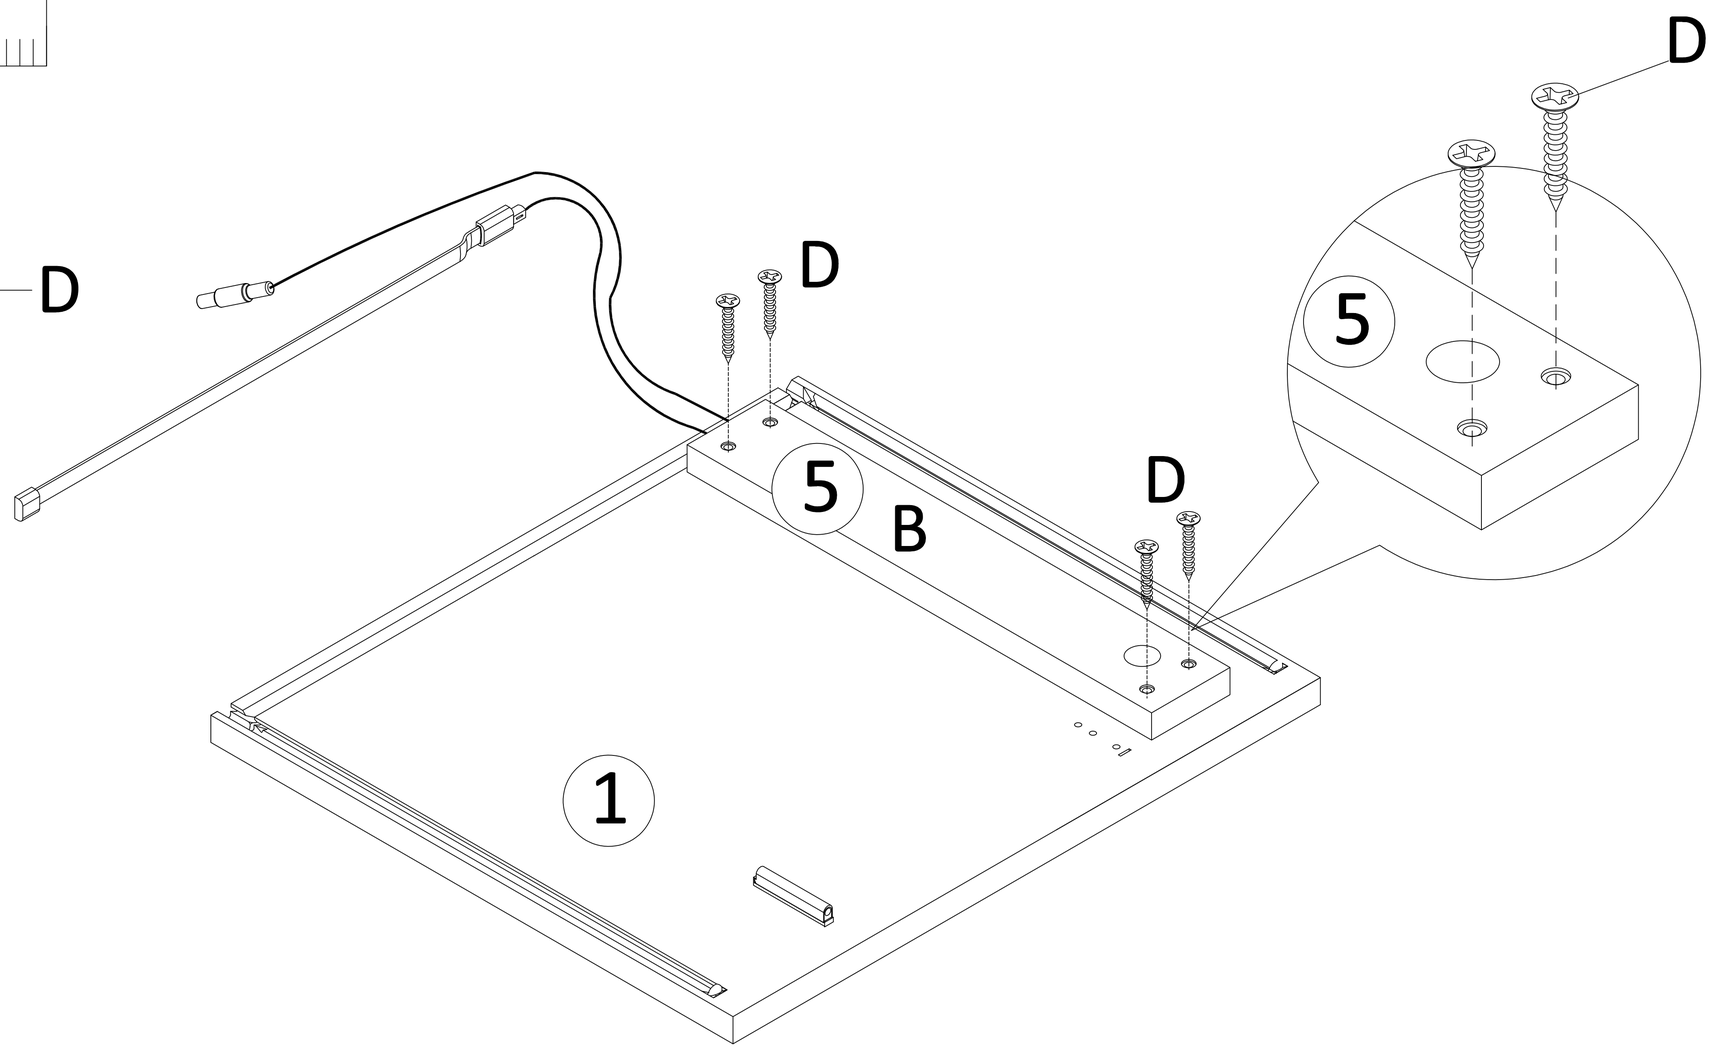
D
D
5
B
D
5
1

3

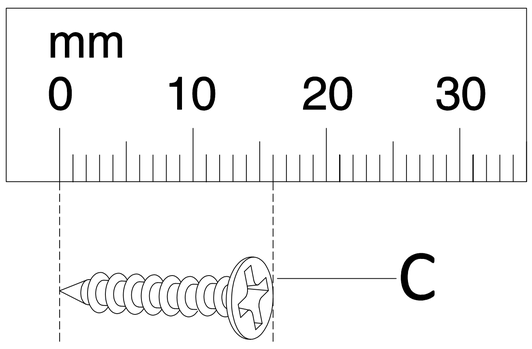

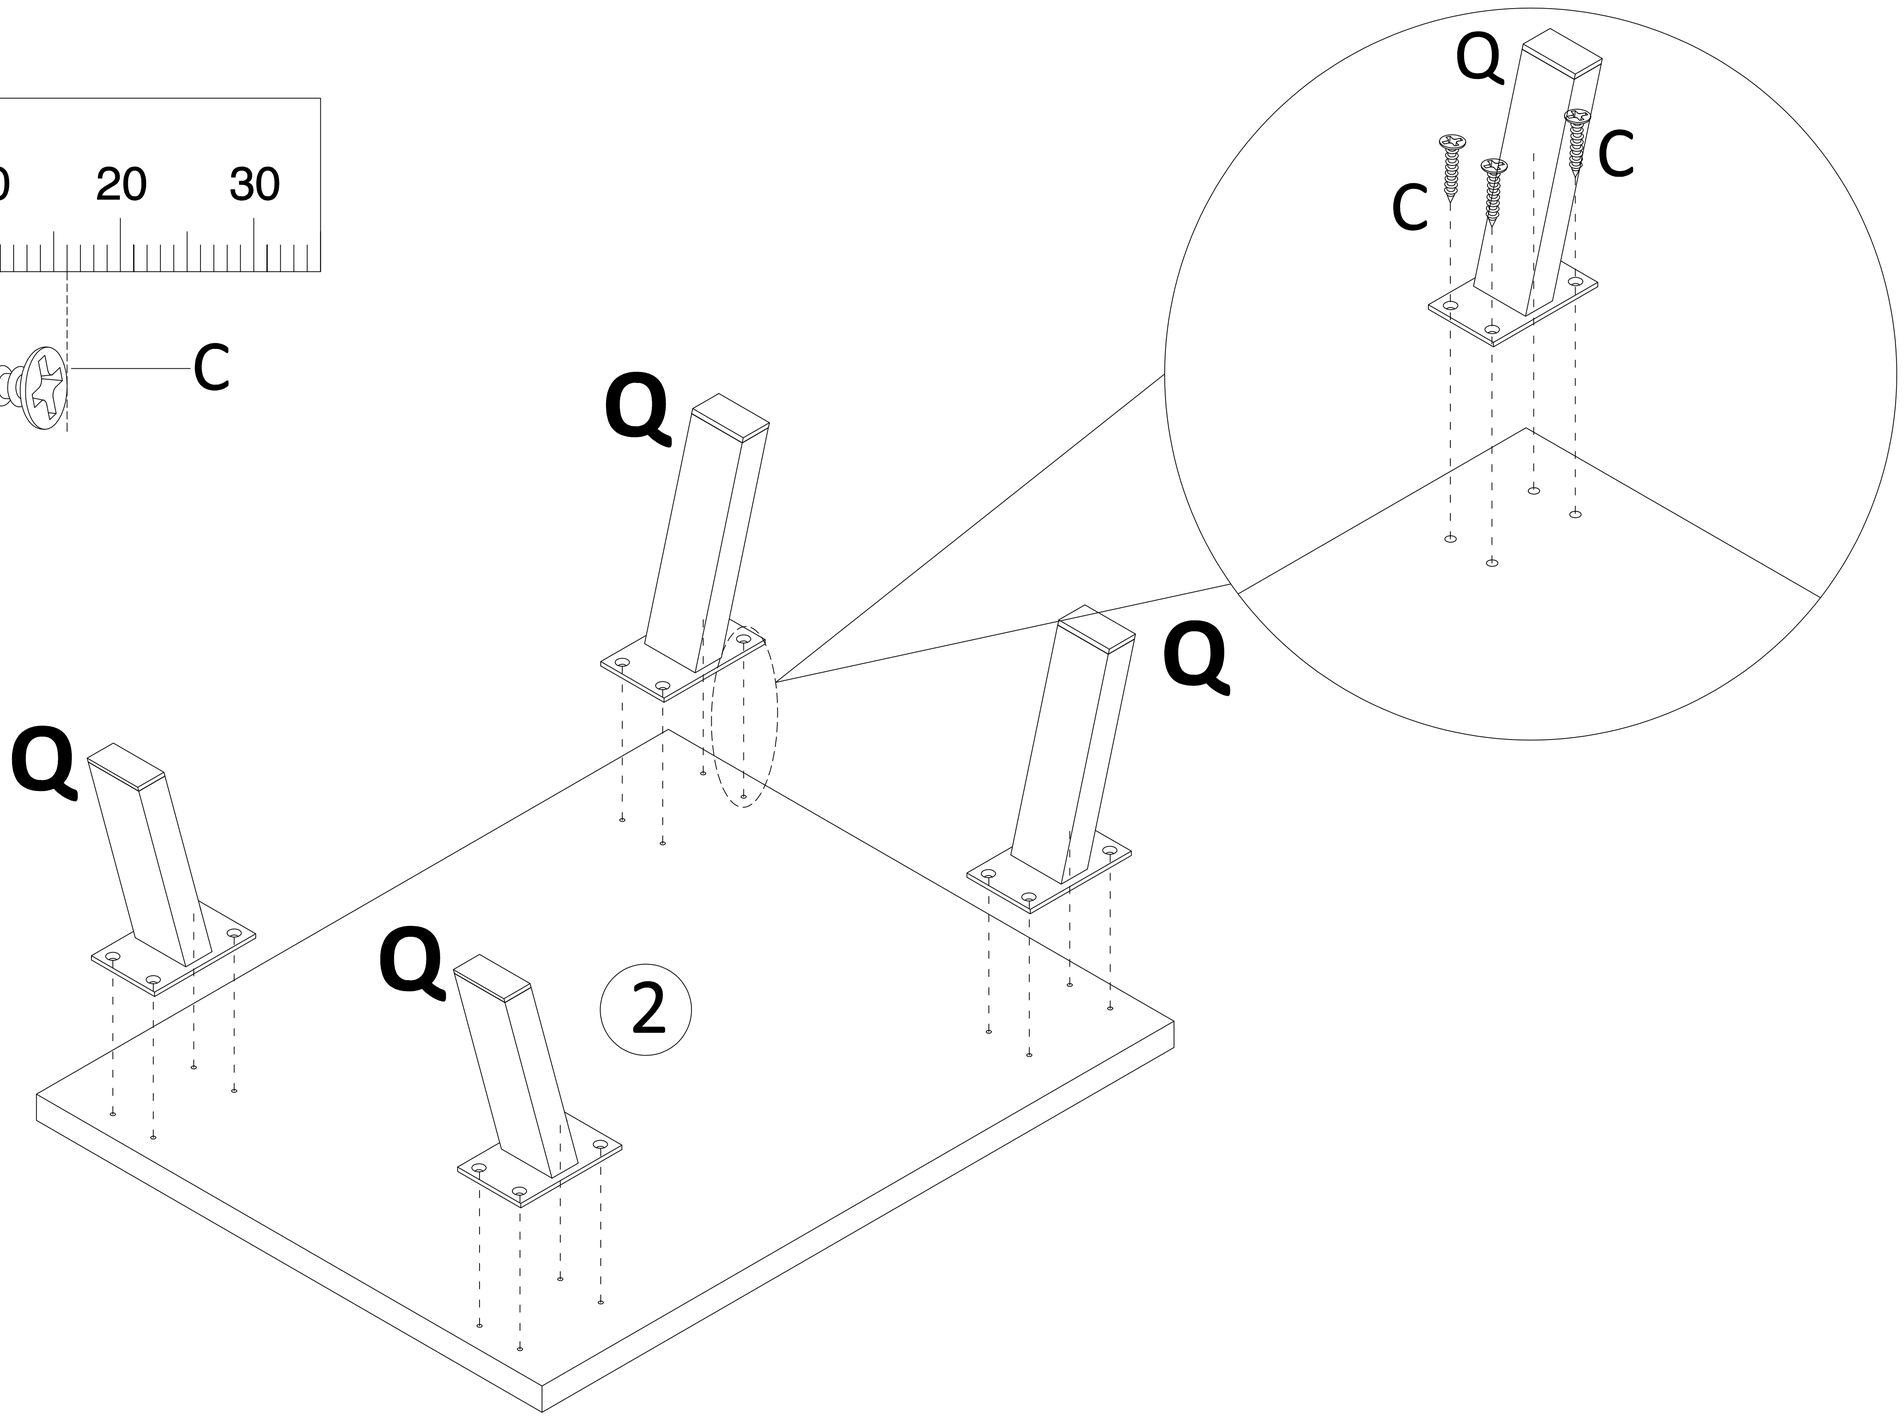

4 NOTE : Panels should sit comfortably in position, do not force them, if they do not fit comfortably, they are likely to be UPSIDE down

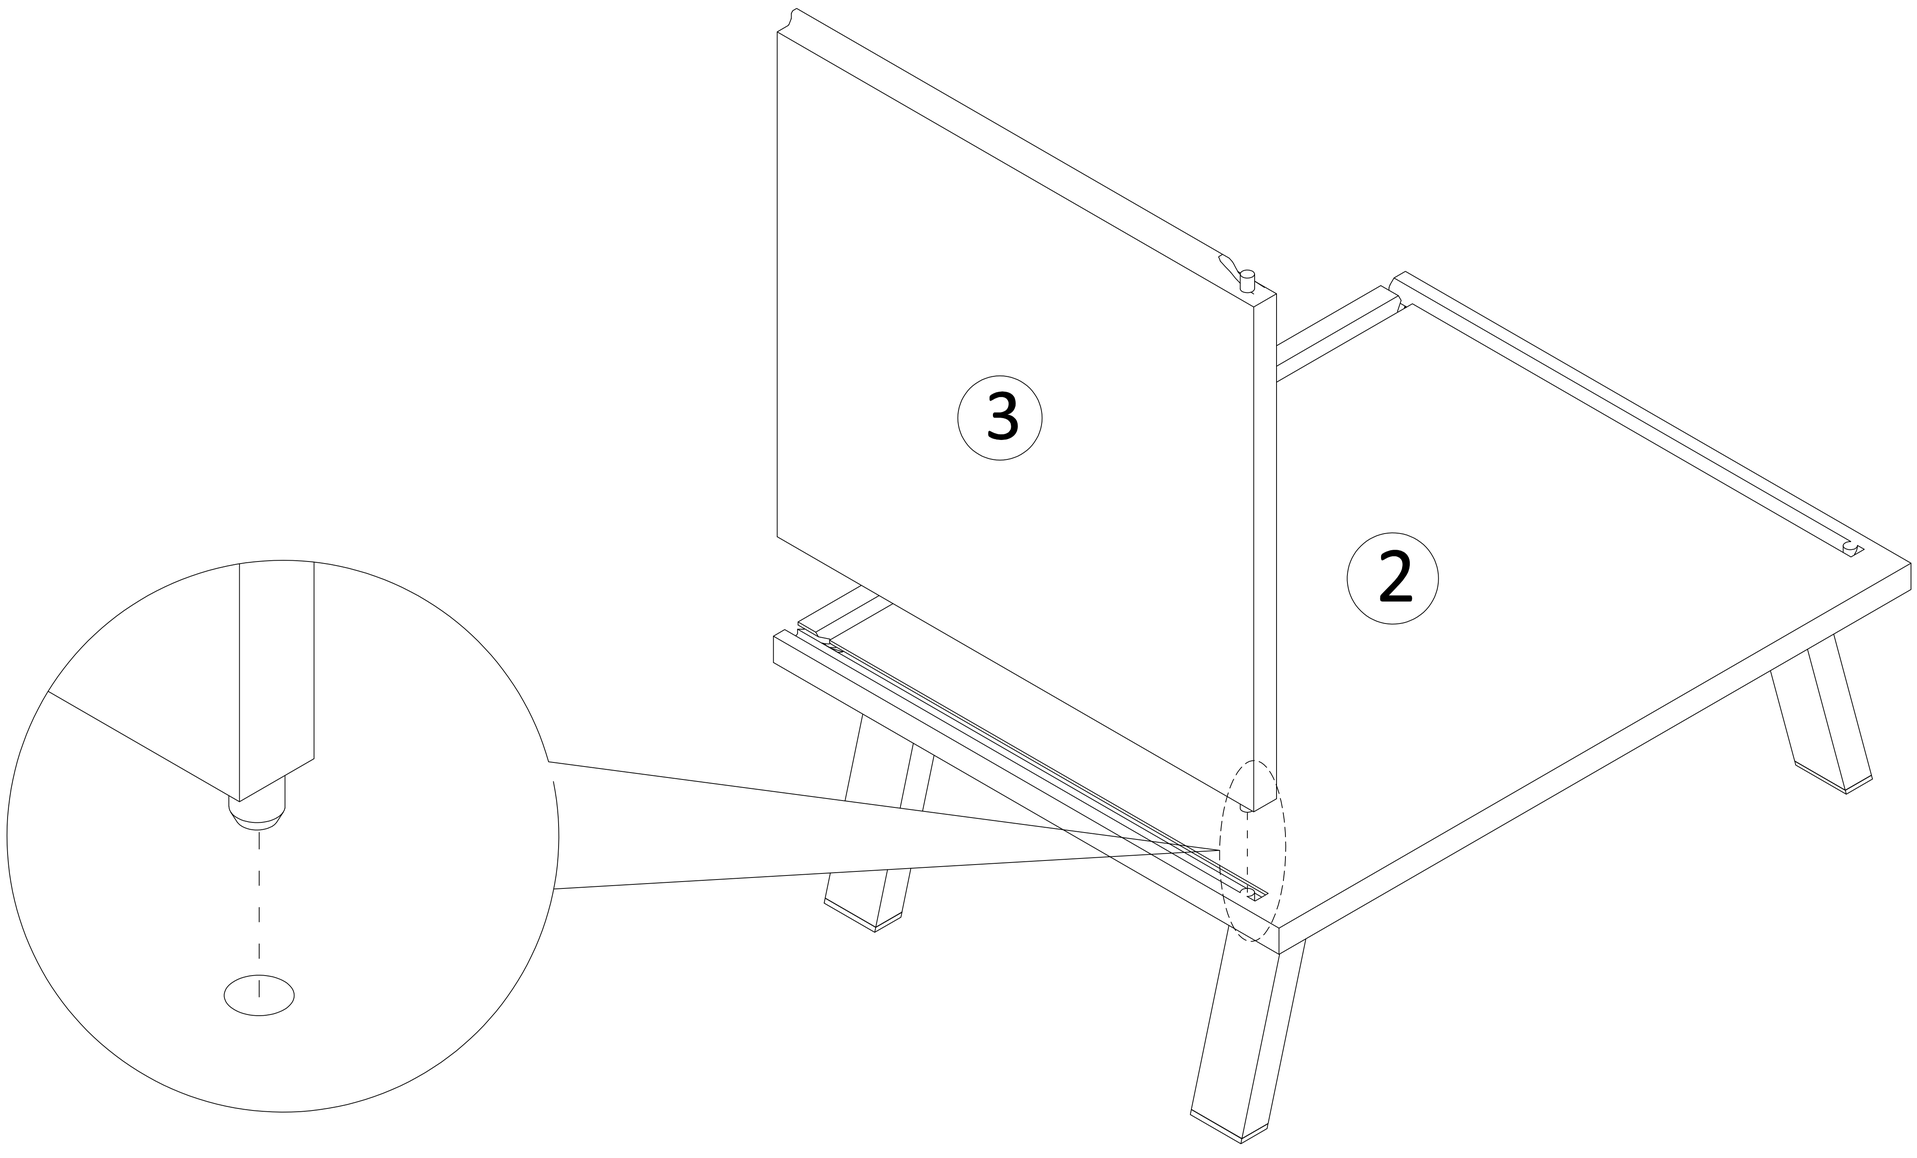

* Locate Dowel position first as a guide

5

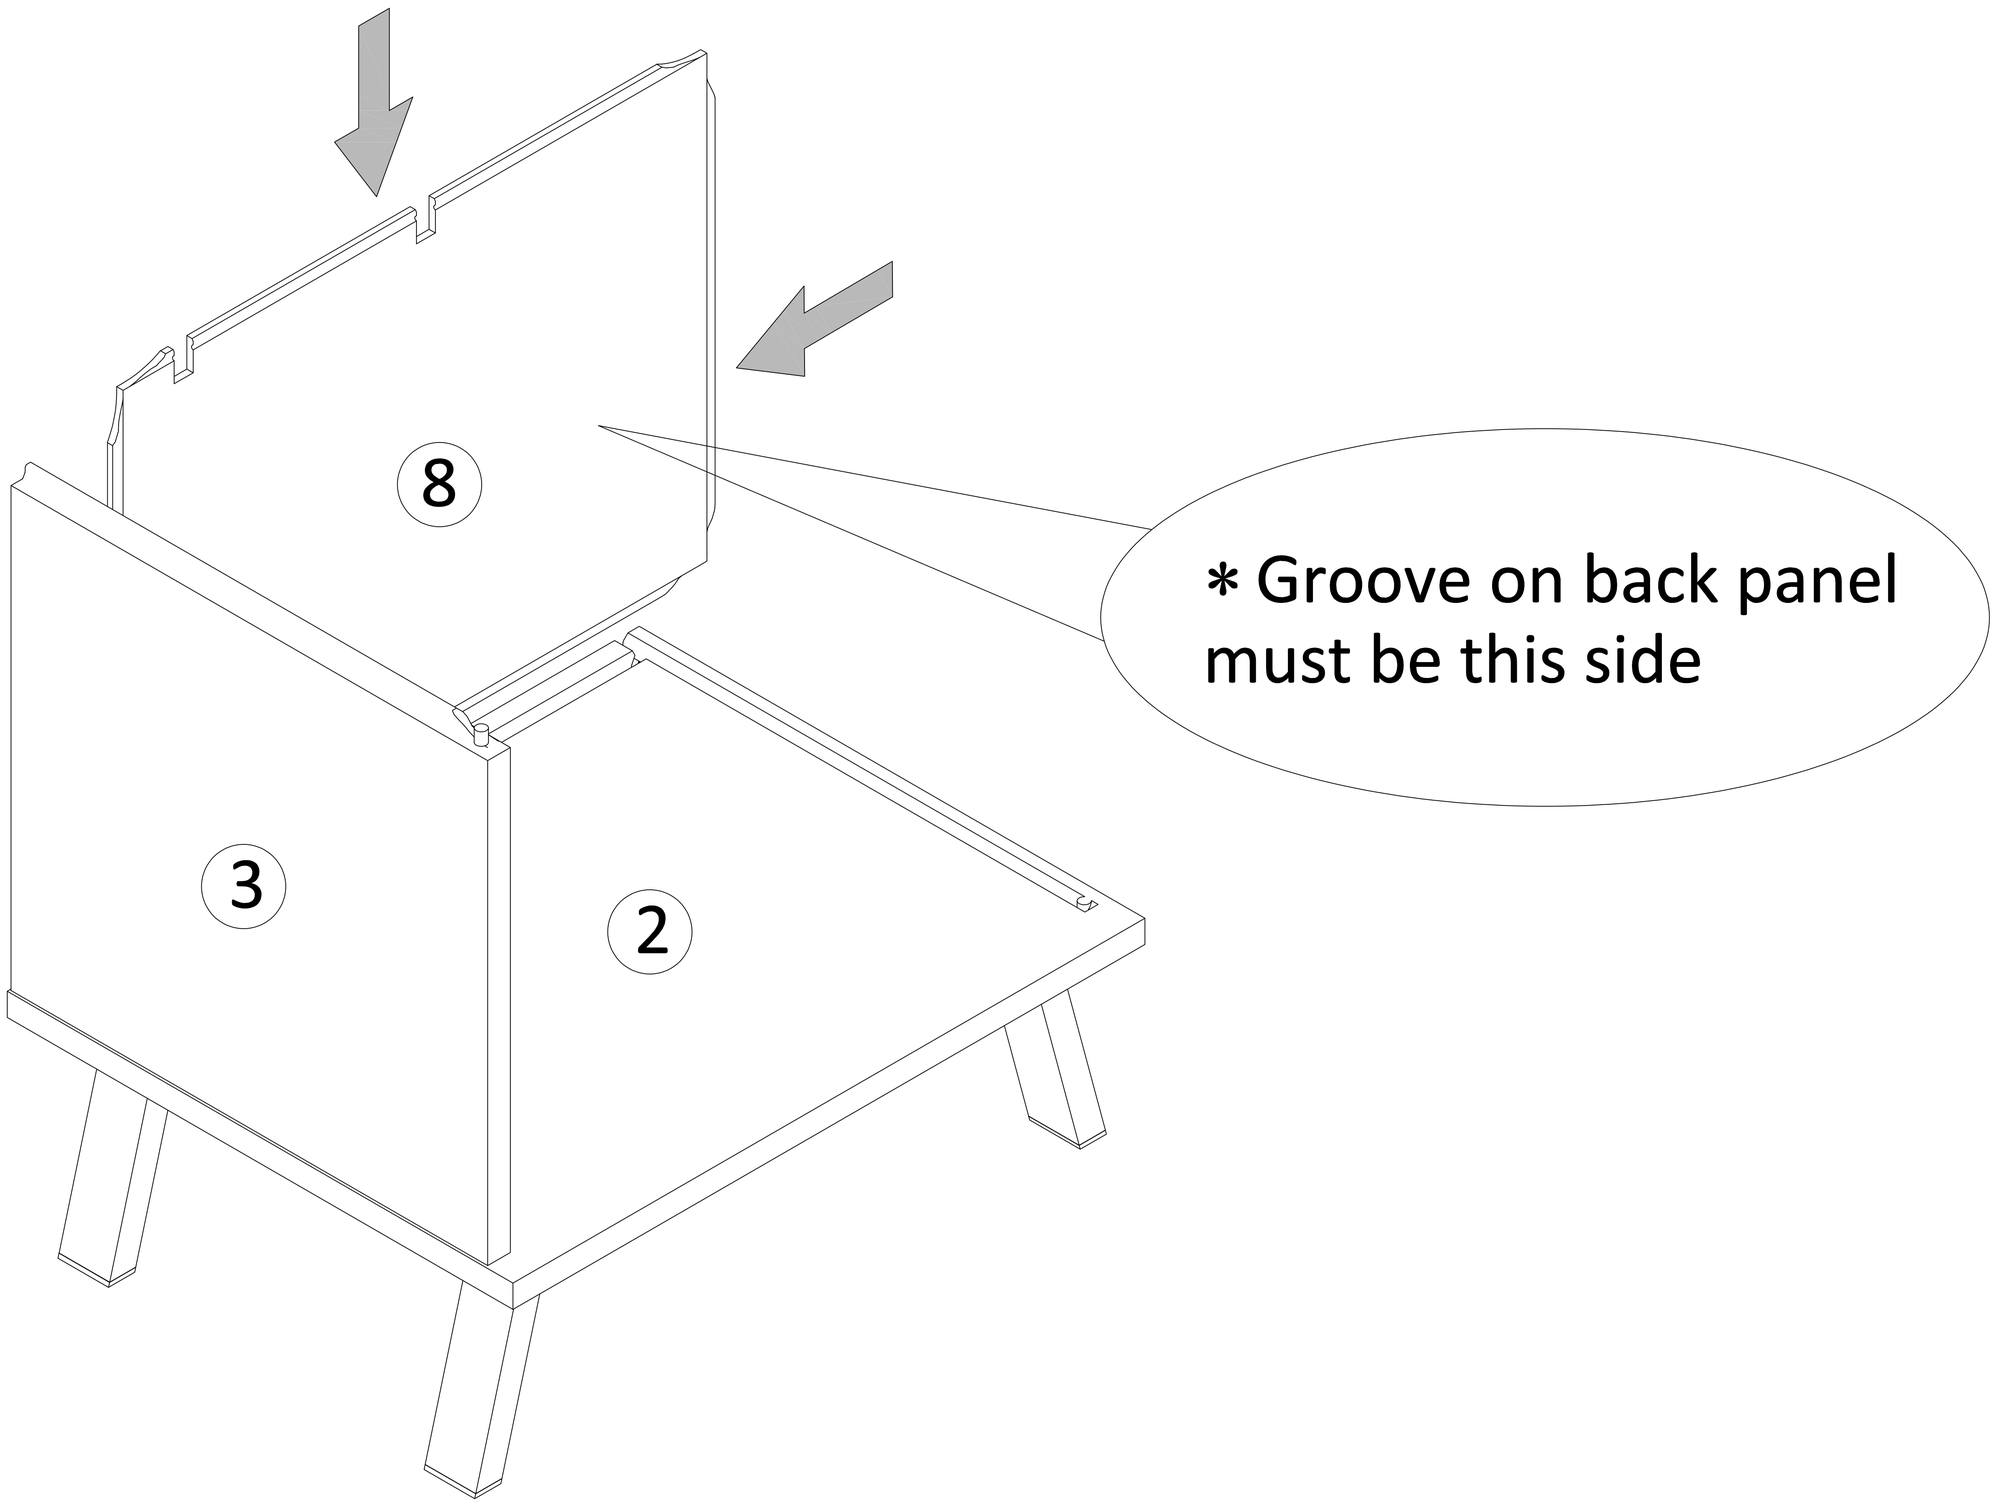

6

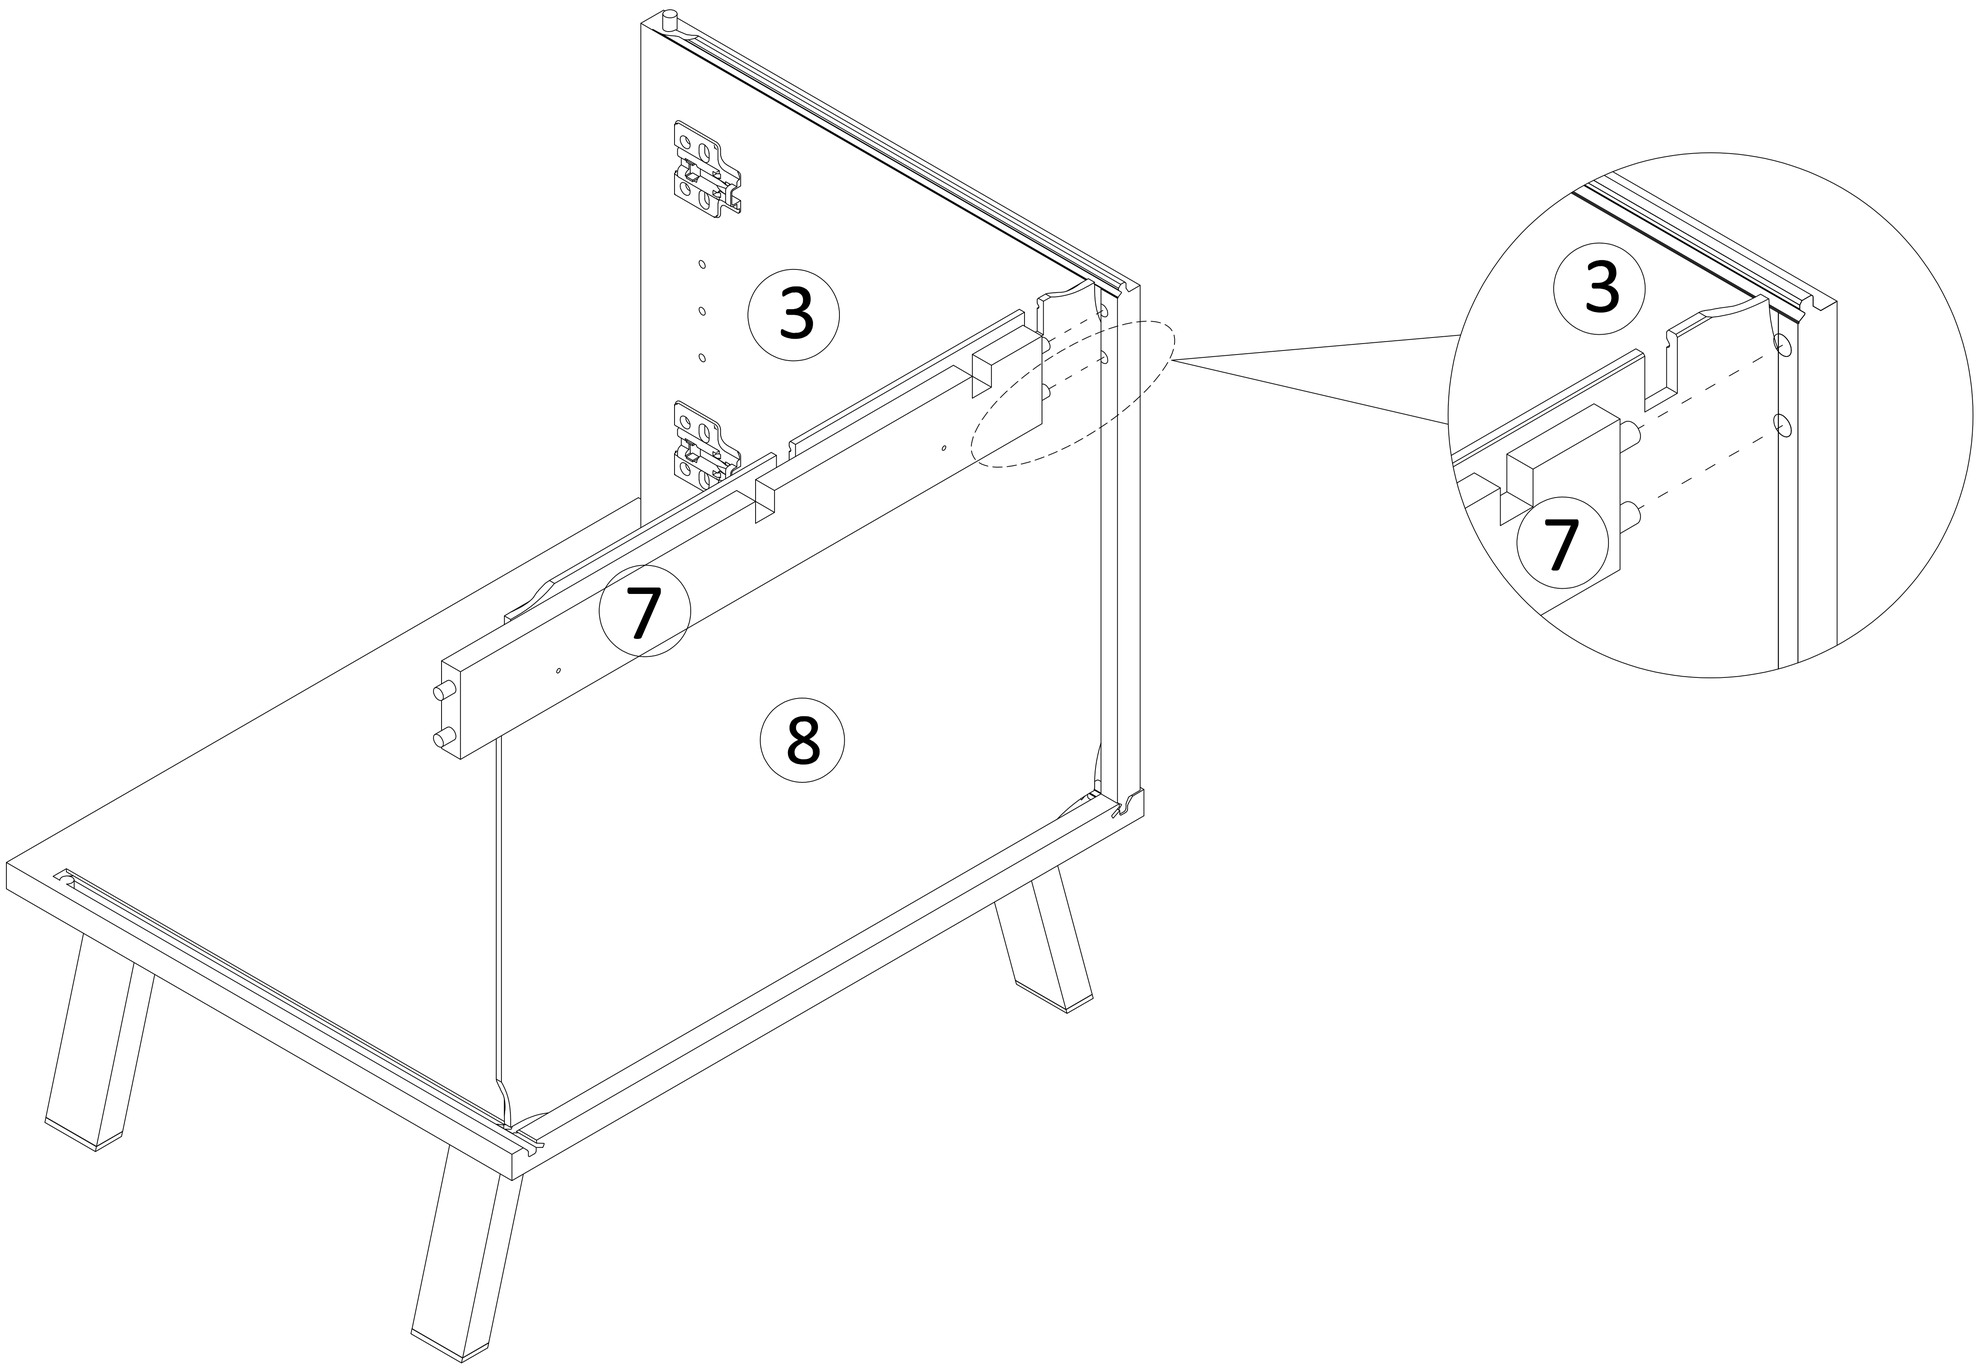

7

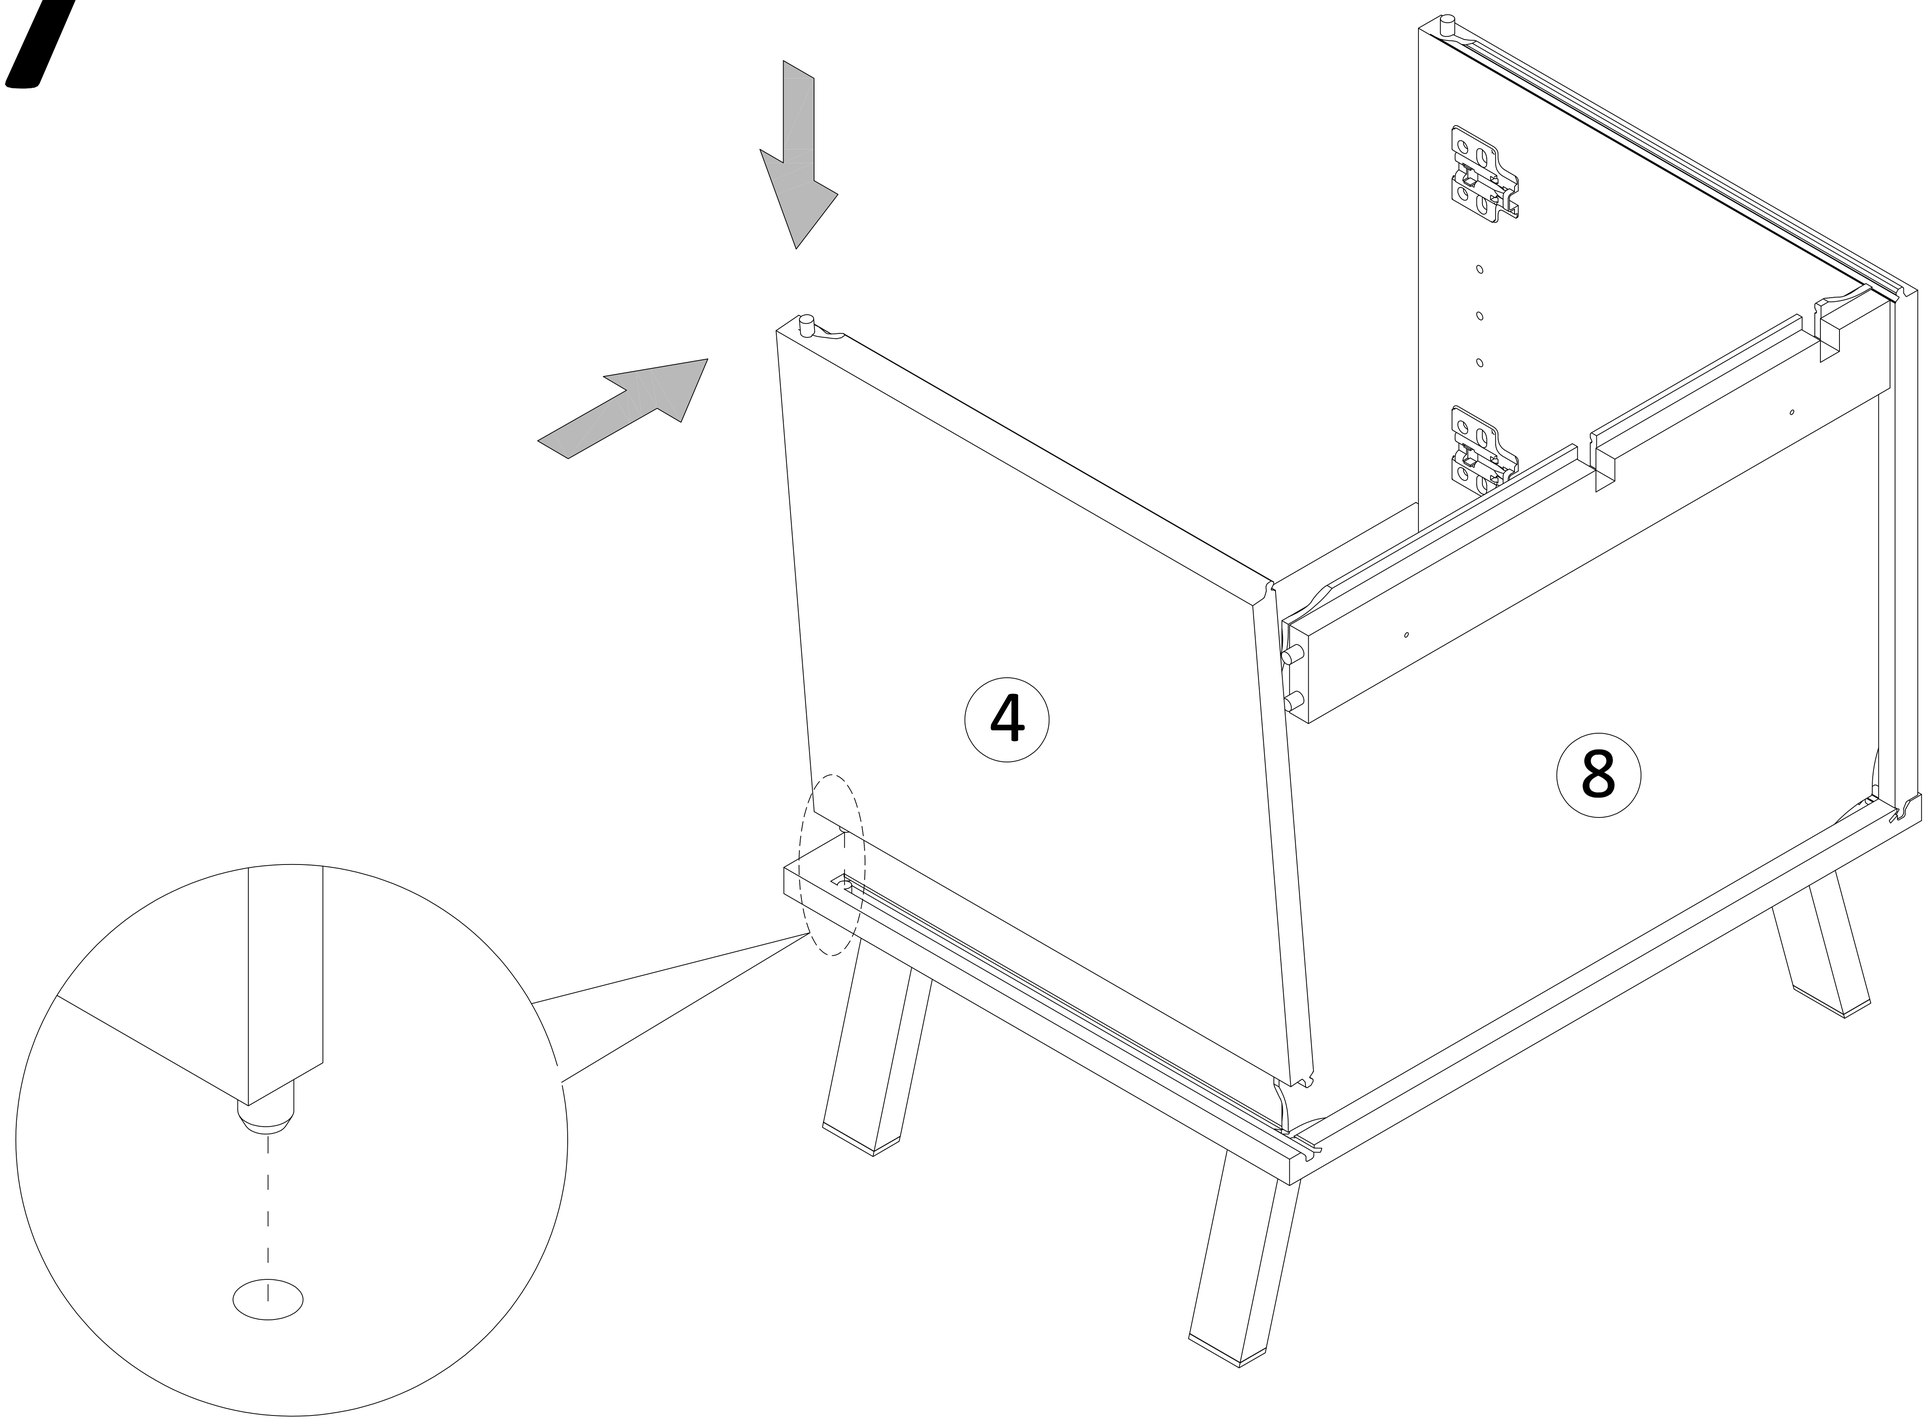

* Locate Dowel position first as a guide

8

* Locate Dowel position first as a guide

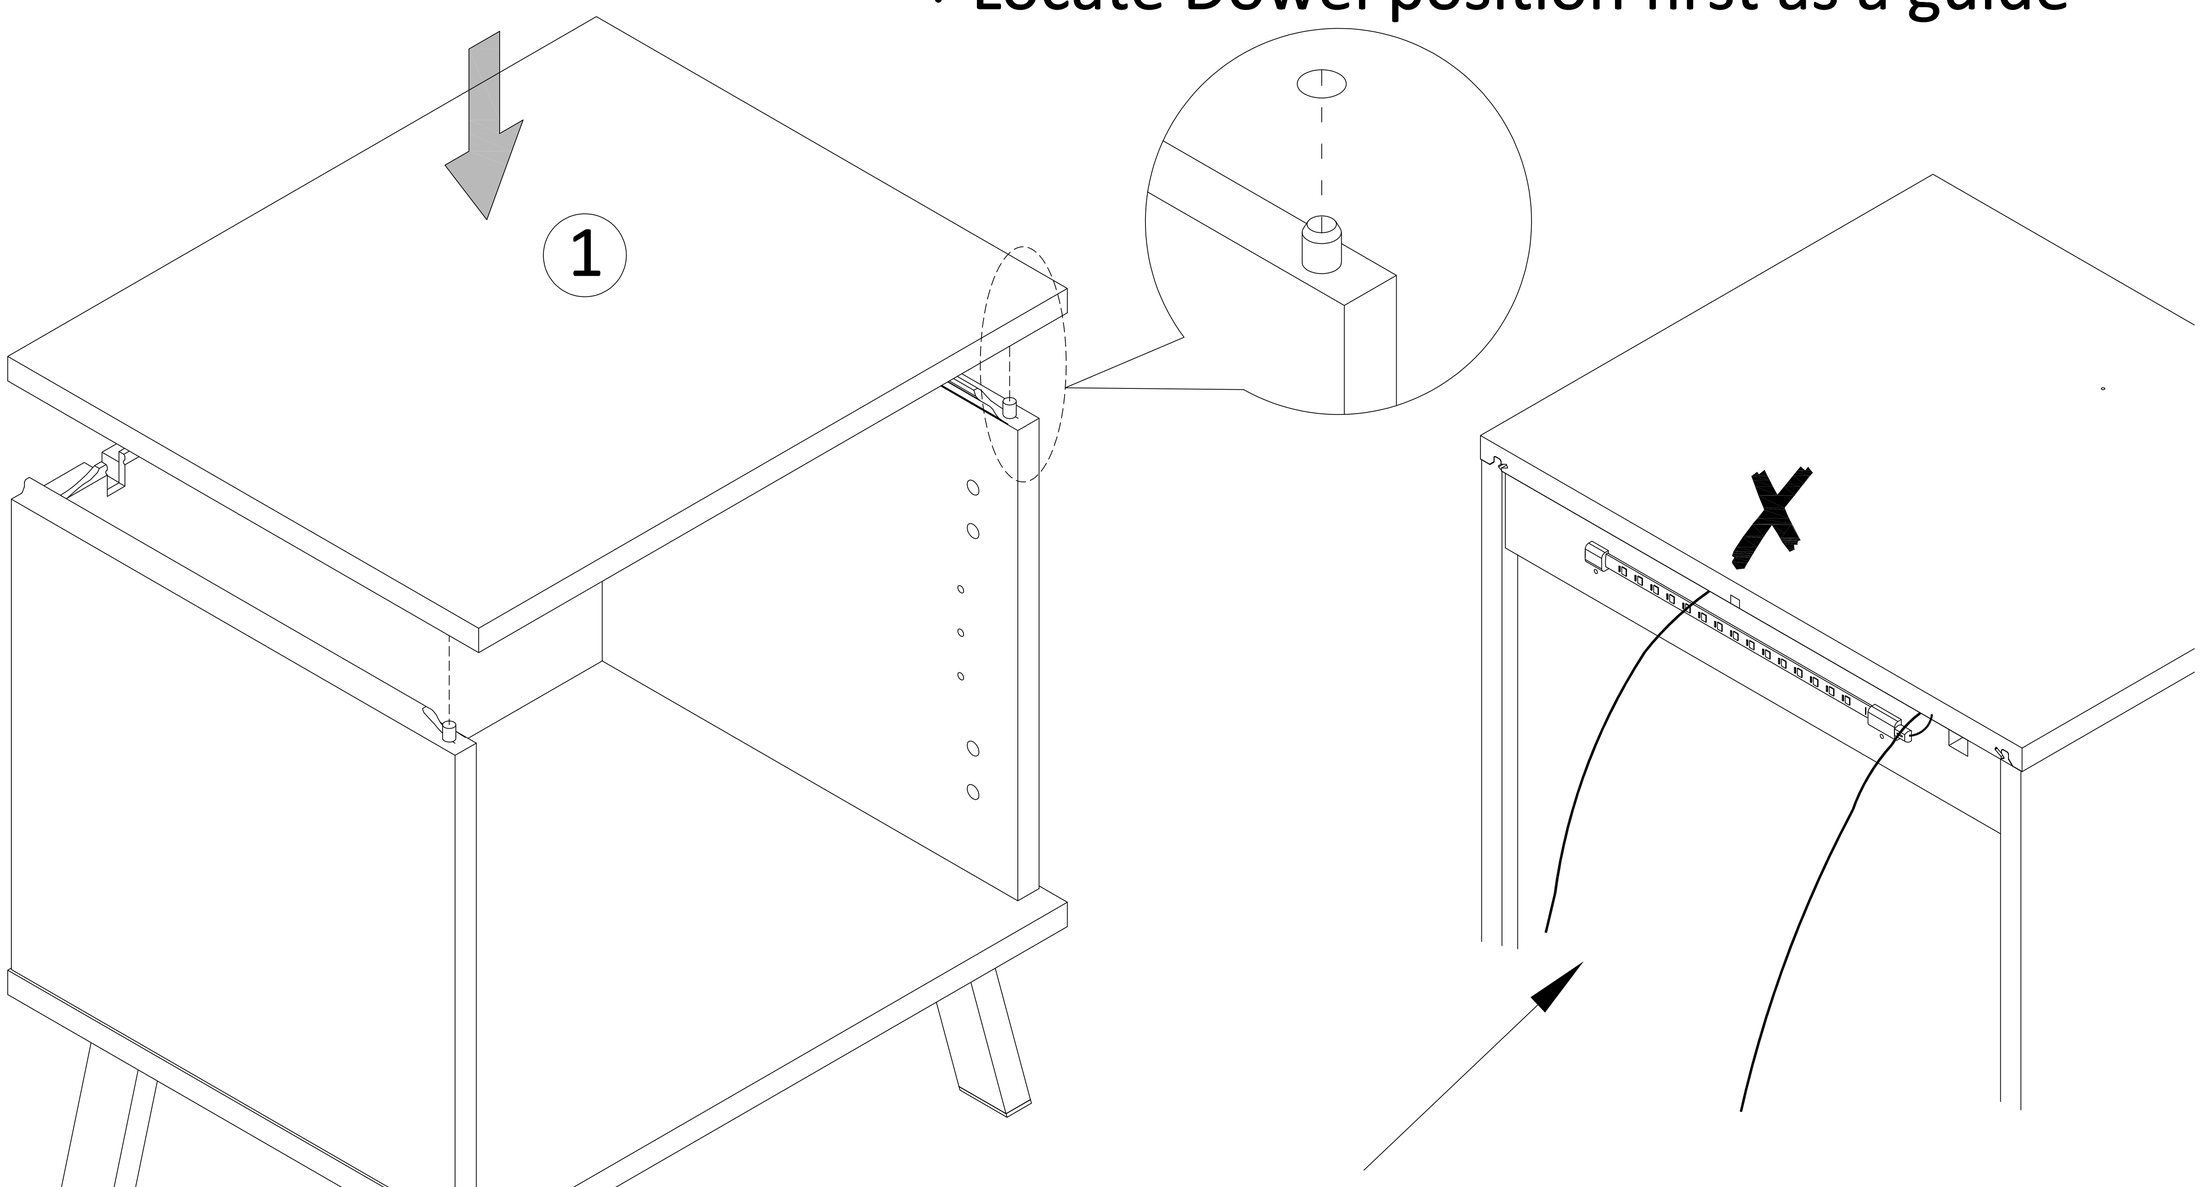

Ensure that cables are not trapped when placing the top panel on (check they are properly hidden in the cable channel)

9

PLEASE FOLLOW THE STEPS TO ENSURE NO DAMAGE.

1. Screw in clip 'I’- ensure surface is DUST FREE

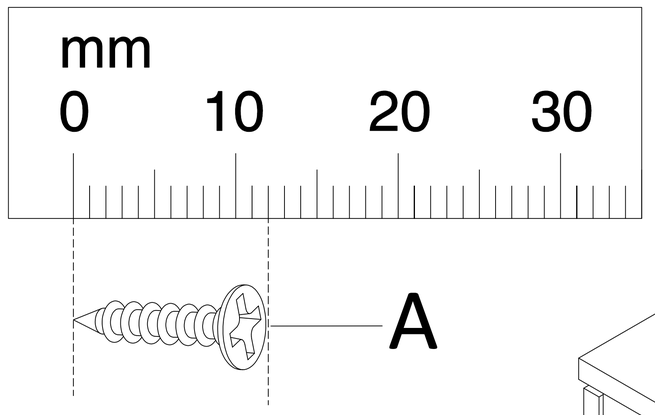

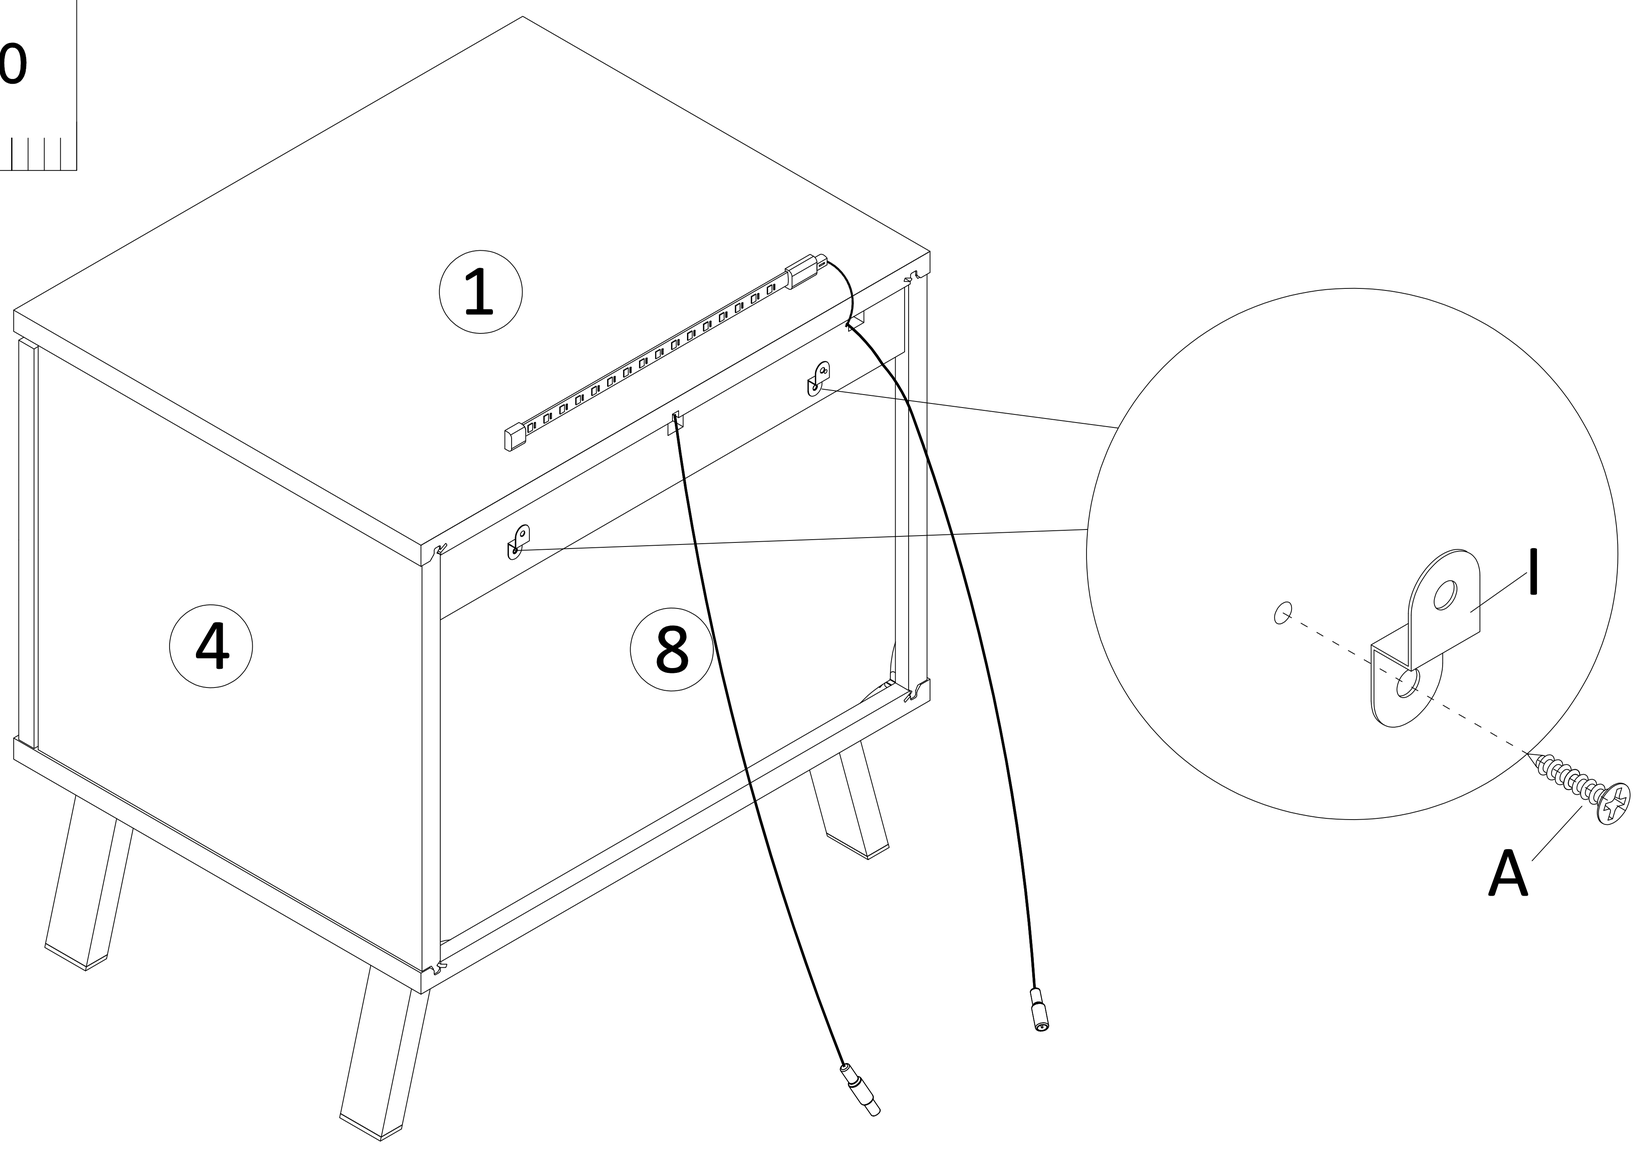

10

CAUTION, When peeling off LED adhesive strip, take extra care to peel ONLY the protective strip, not the adhesive strip.

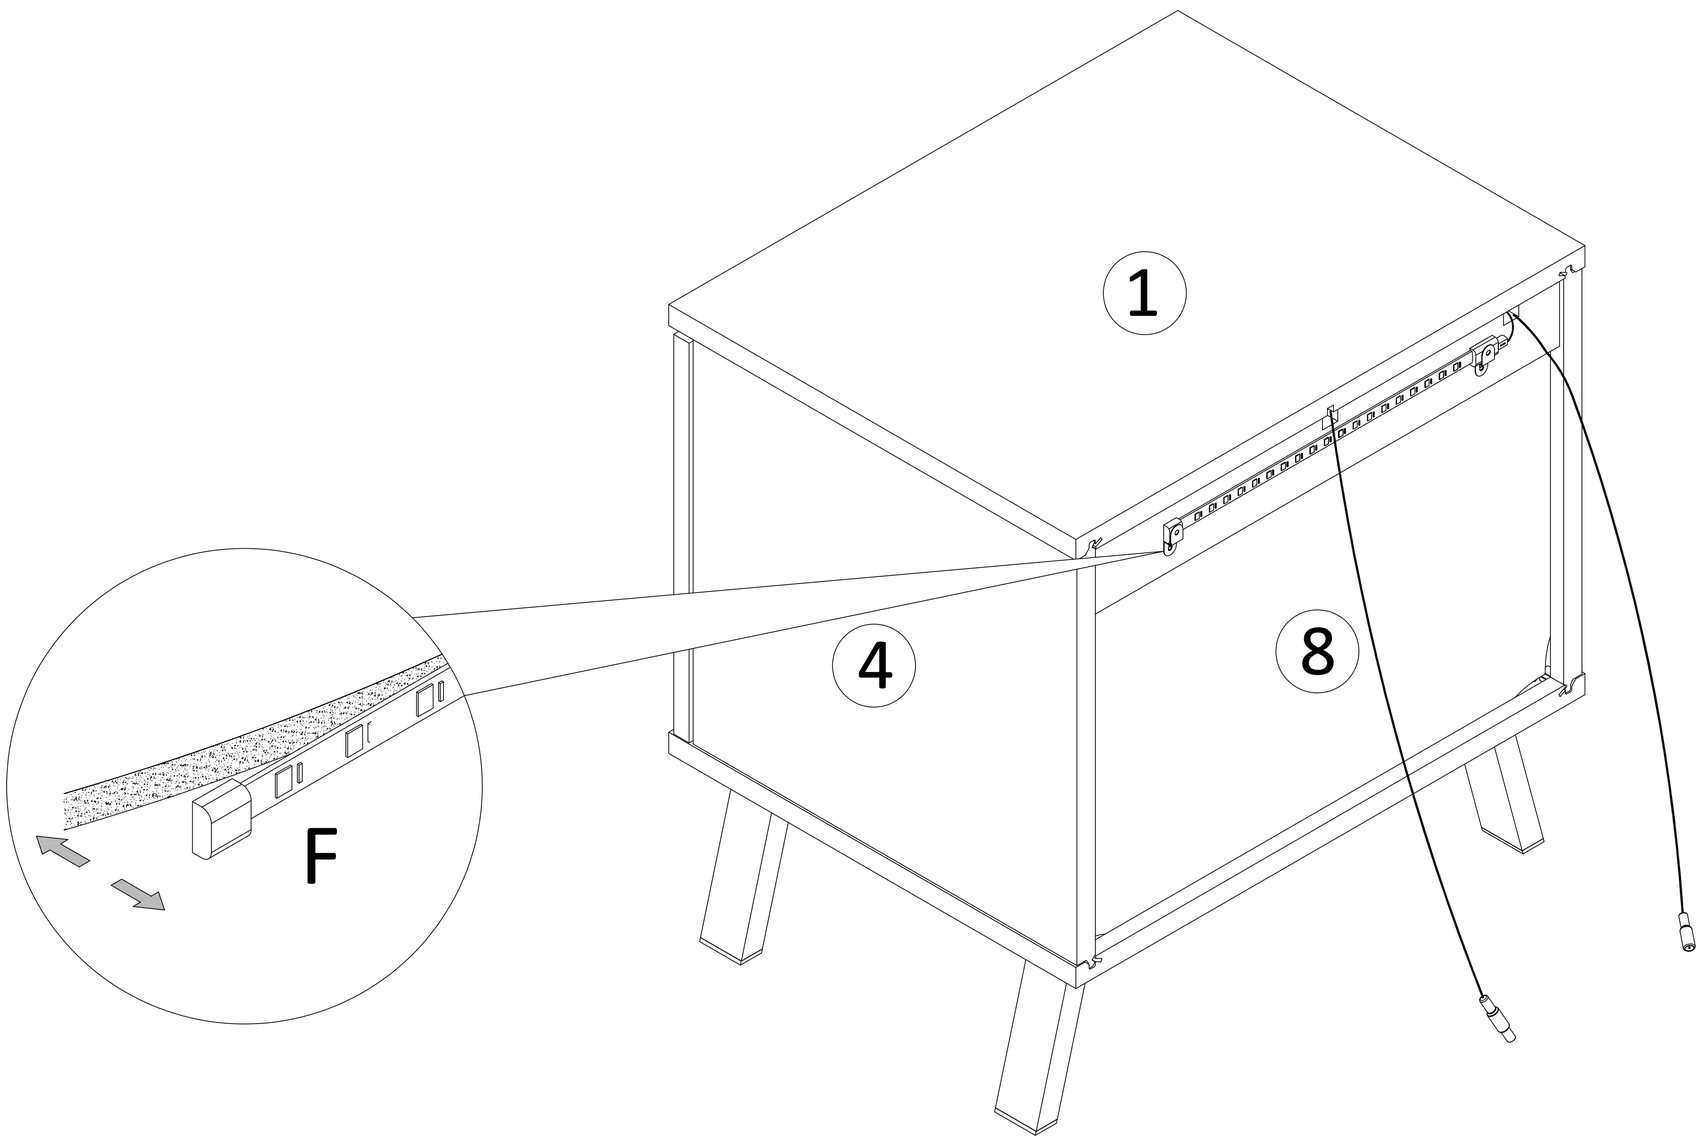

2. Do not remove LED strip backing yet. Place LED strip in position under the clip and lay LED strip in place.

3. Start from the CLIP end, remove the LED strip backing with care and place in position on the edge of the back panel pressing fimly.

4. Gently pull the wires so that the end of the LED strip is straight and sticking in position.

11

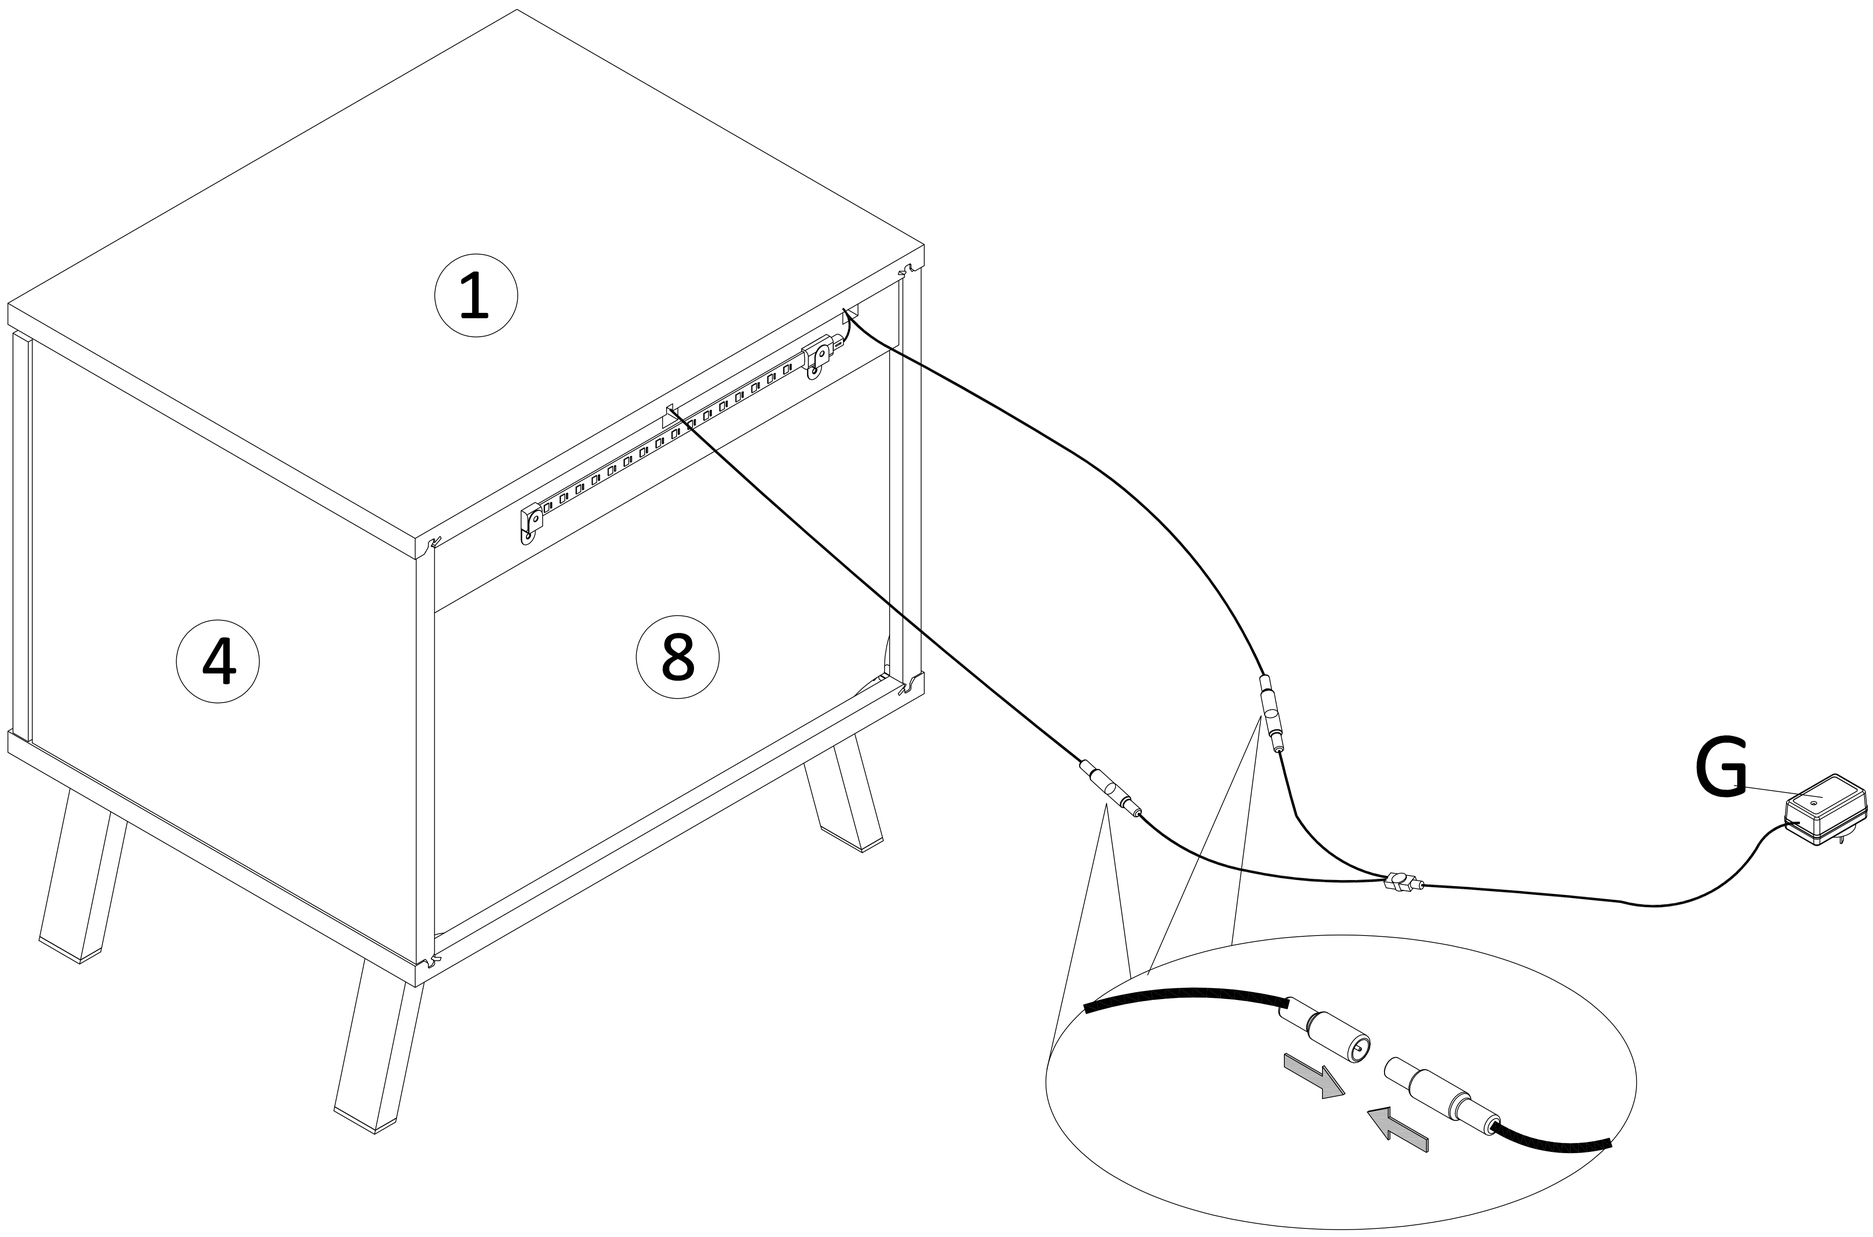

12

NOTE : See separate instructions provided on setting up the app / LED strip and Alexa voice control.

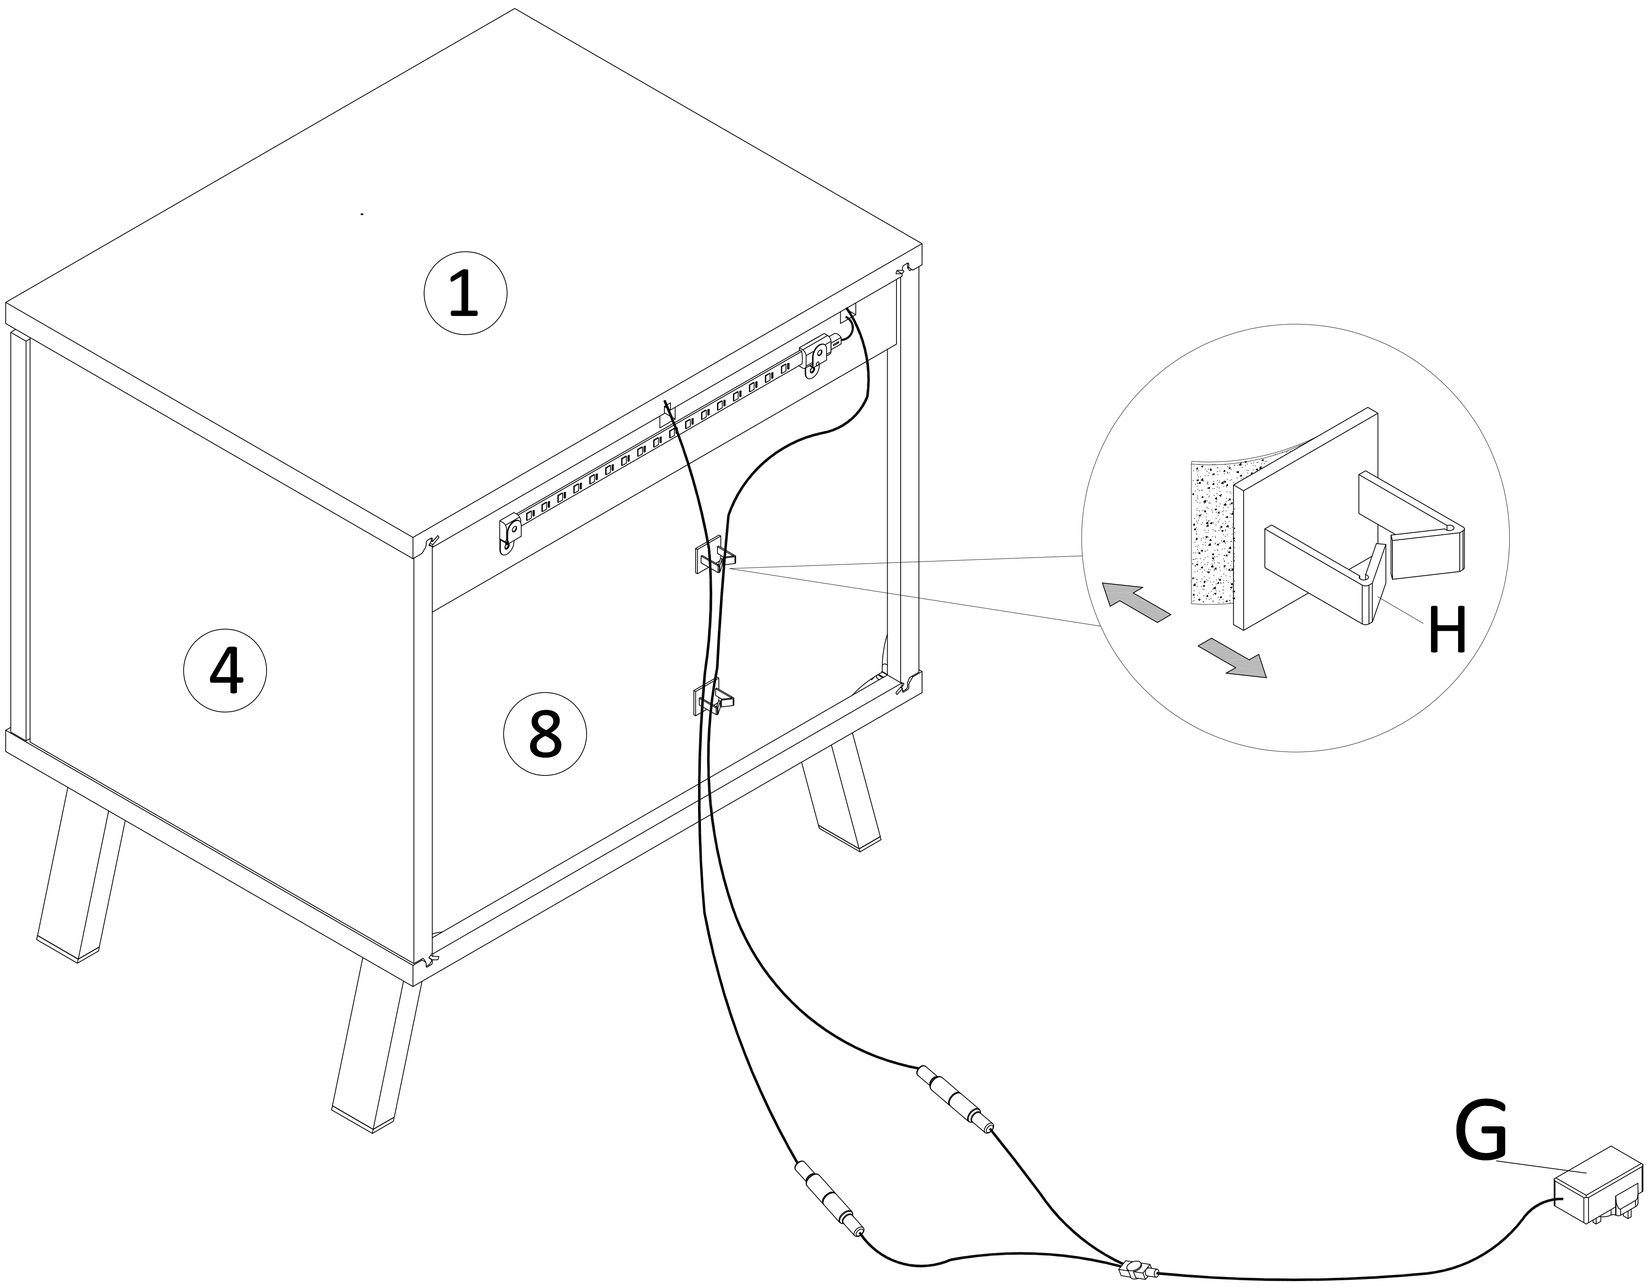

13

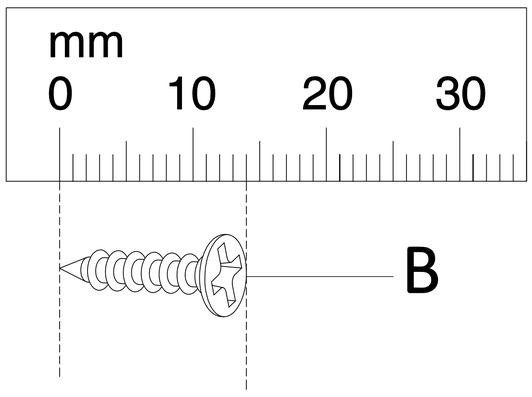

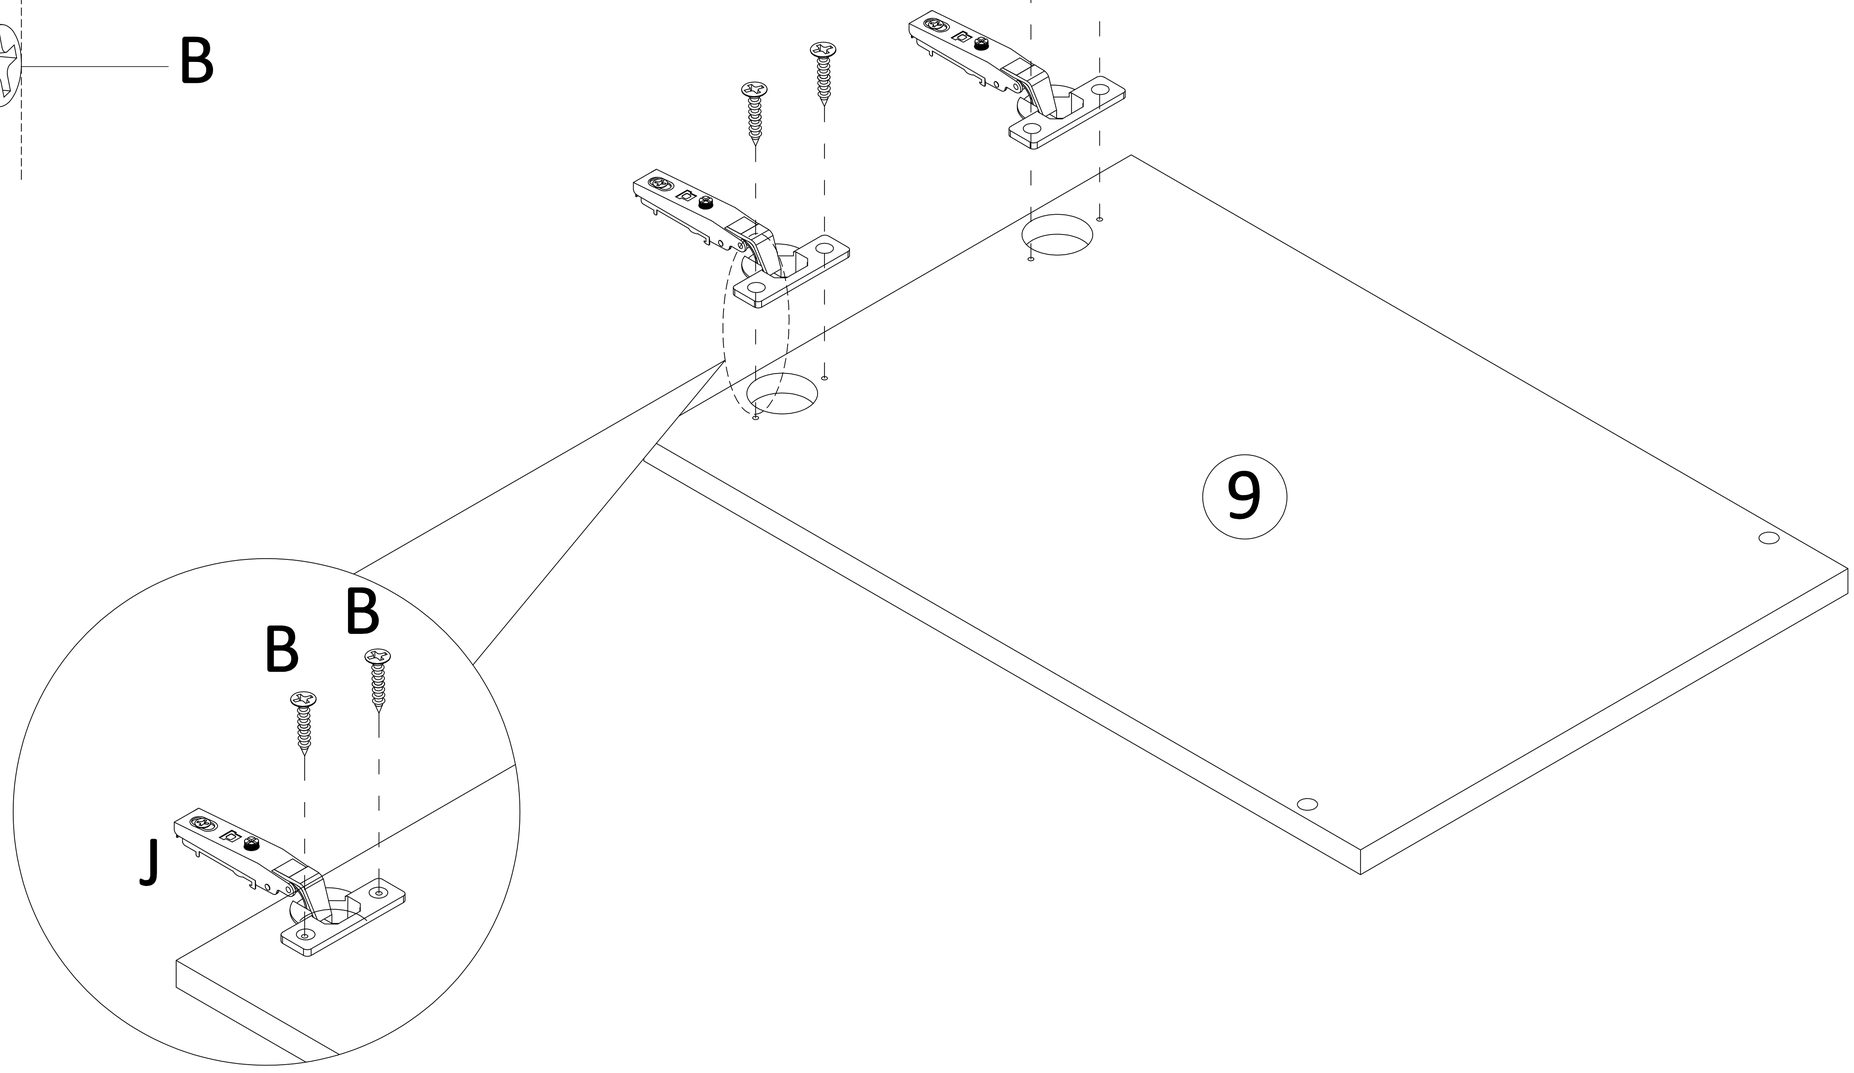

14

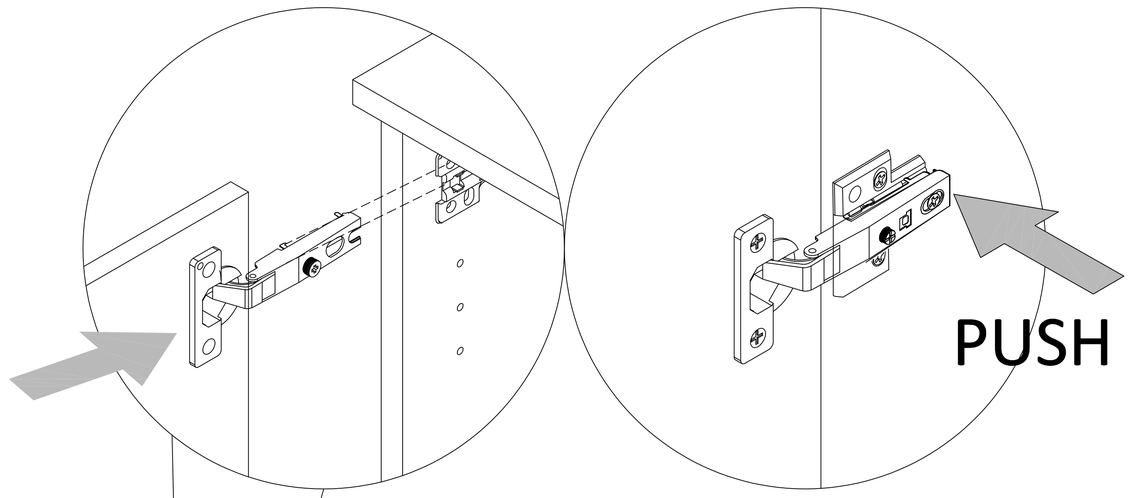

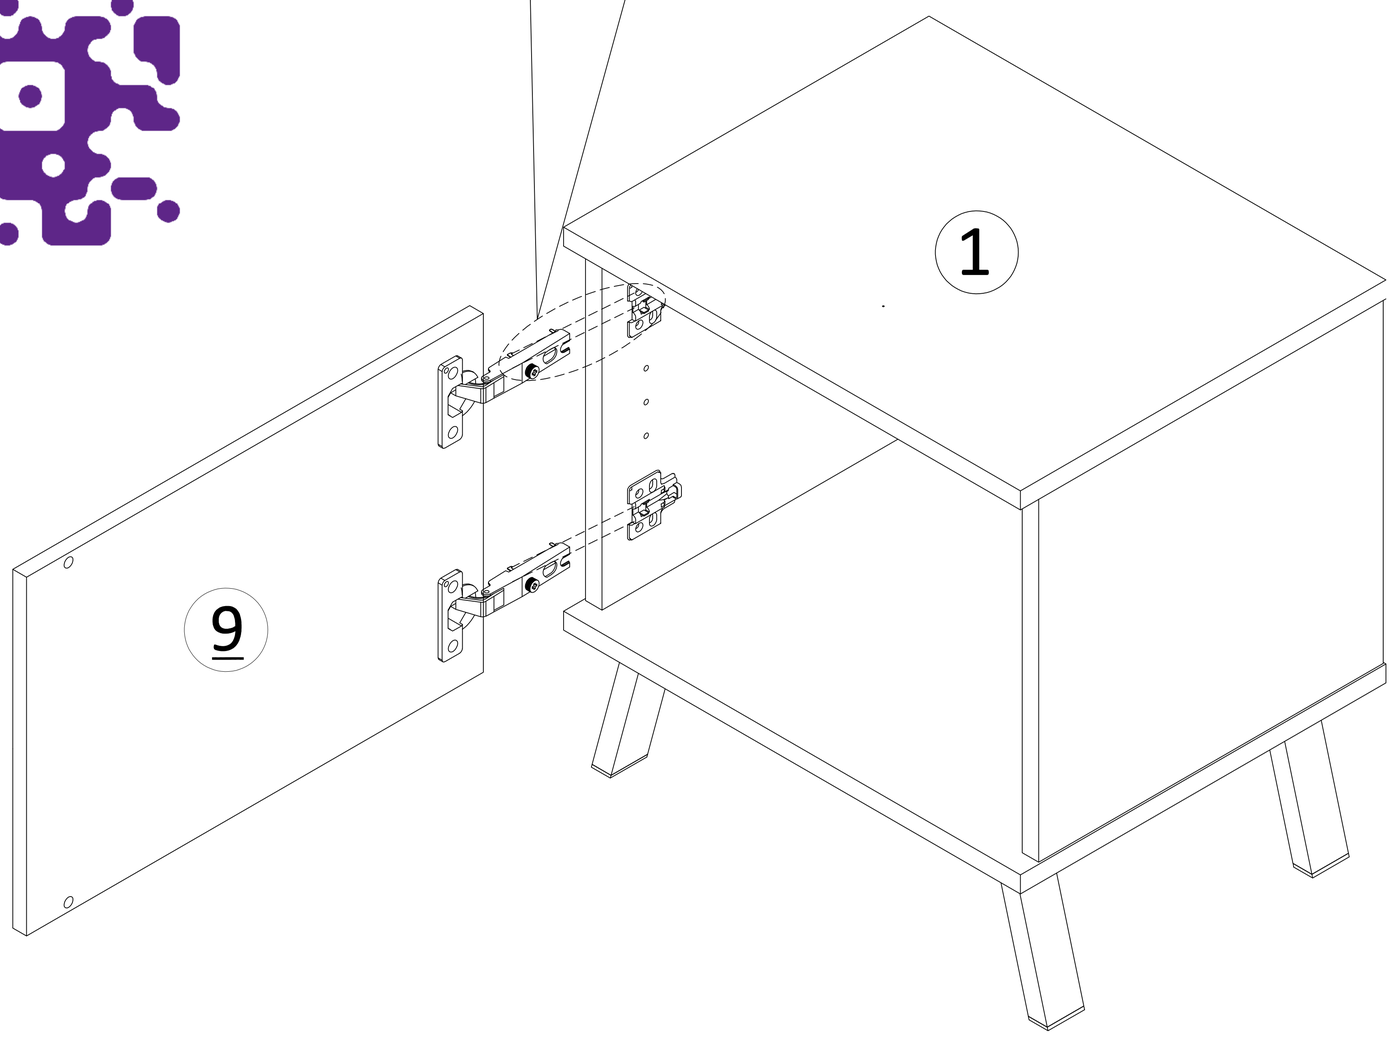

15

To get the doors aligned perfectly, the hinges can be adjusted in three places.

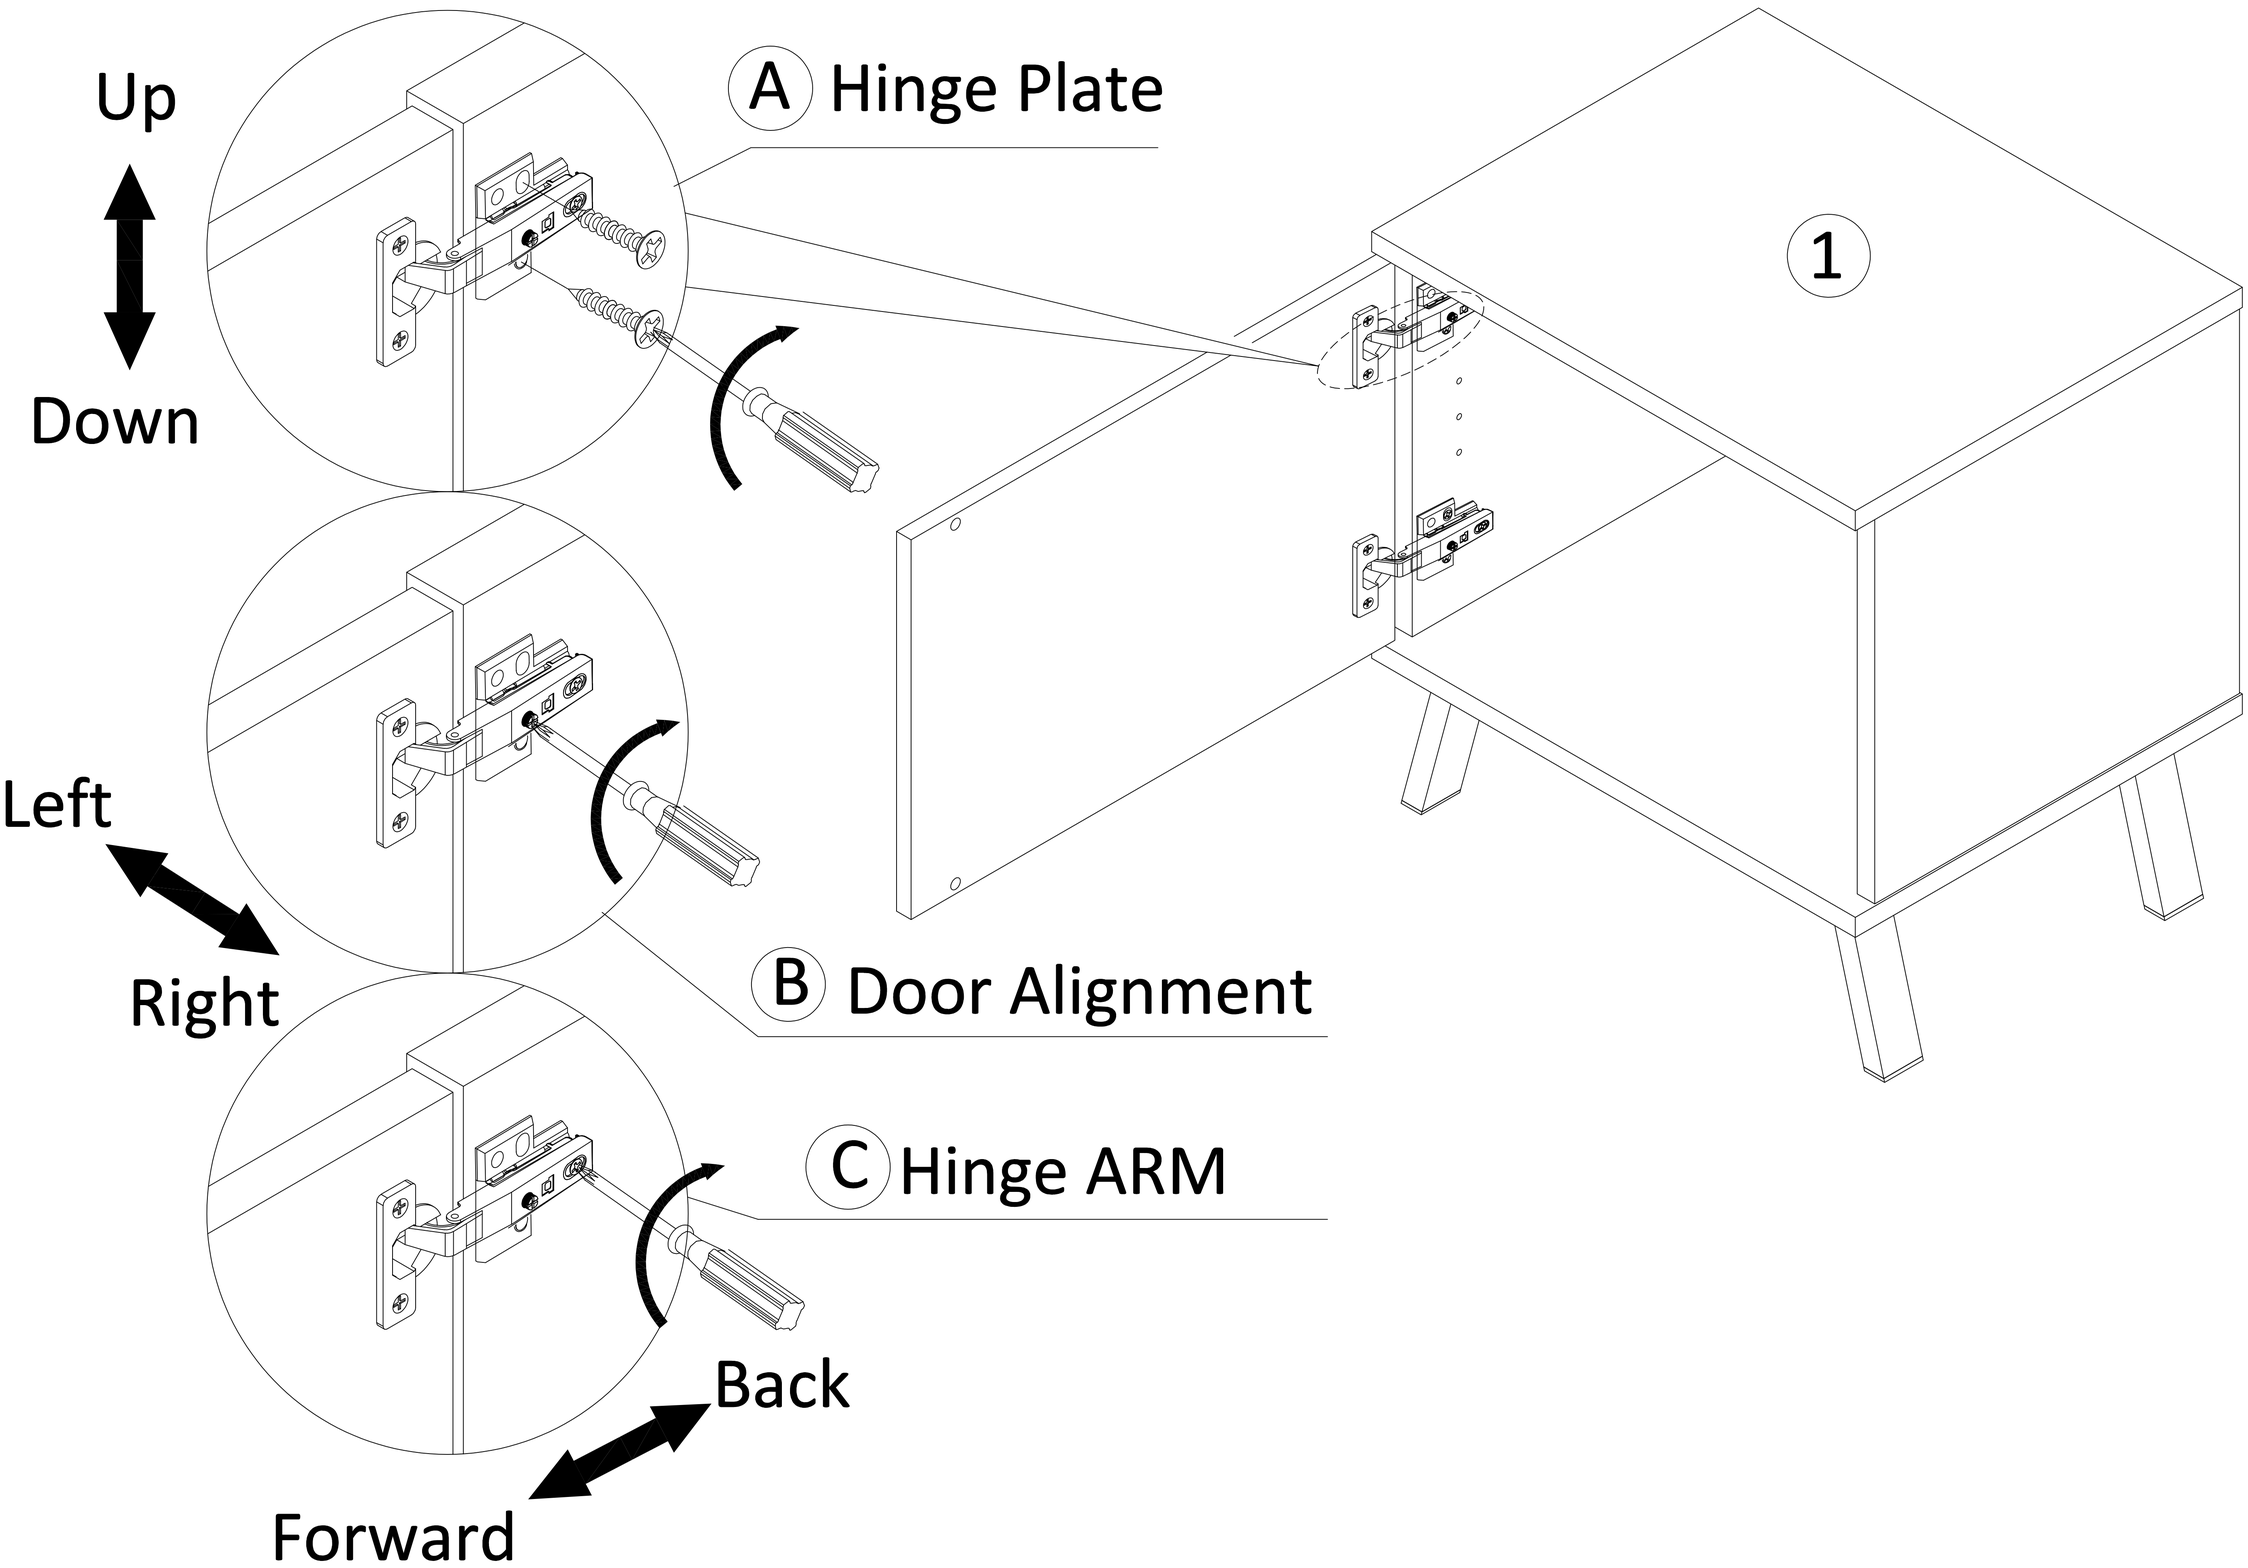

16

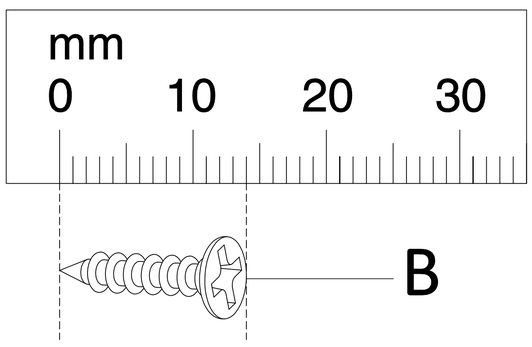

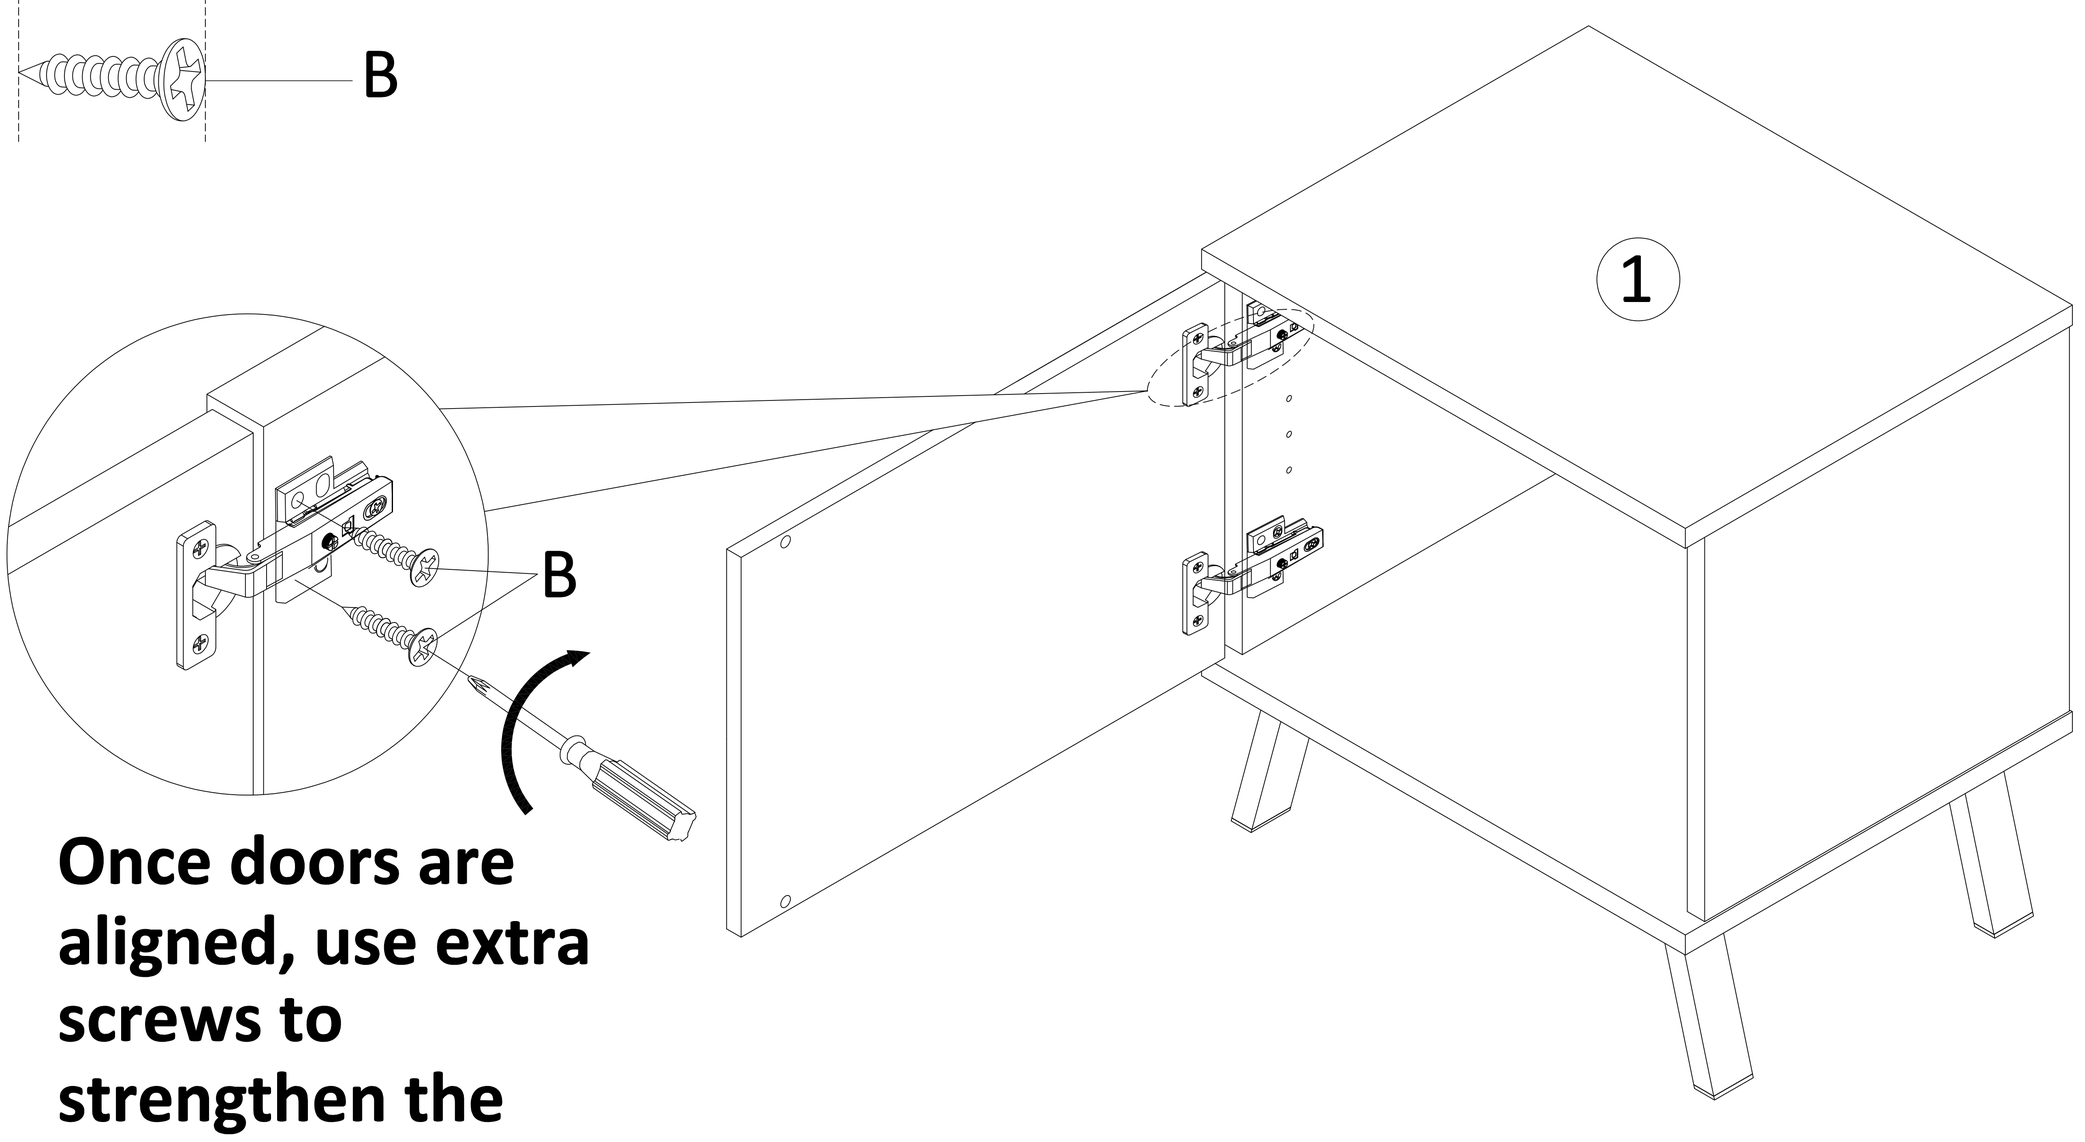

Once doors are aligned, use extra screws to strengthen the hinge.

17

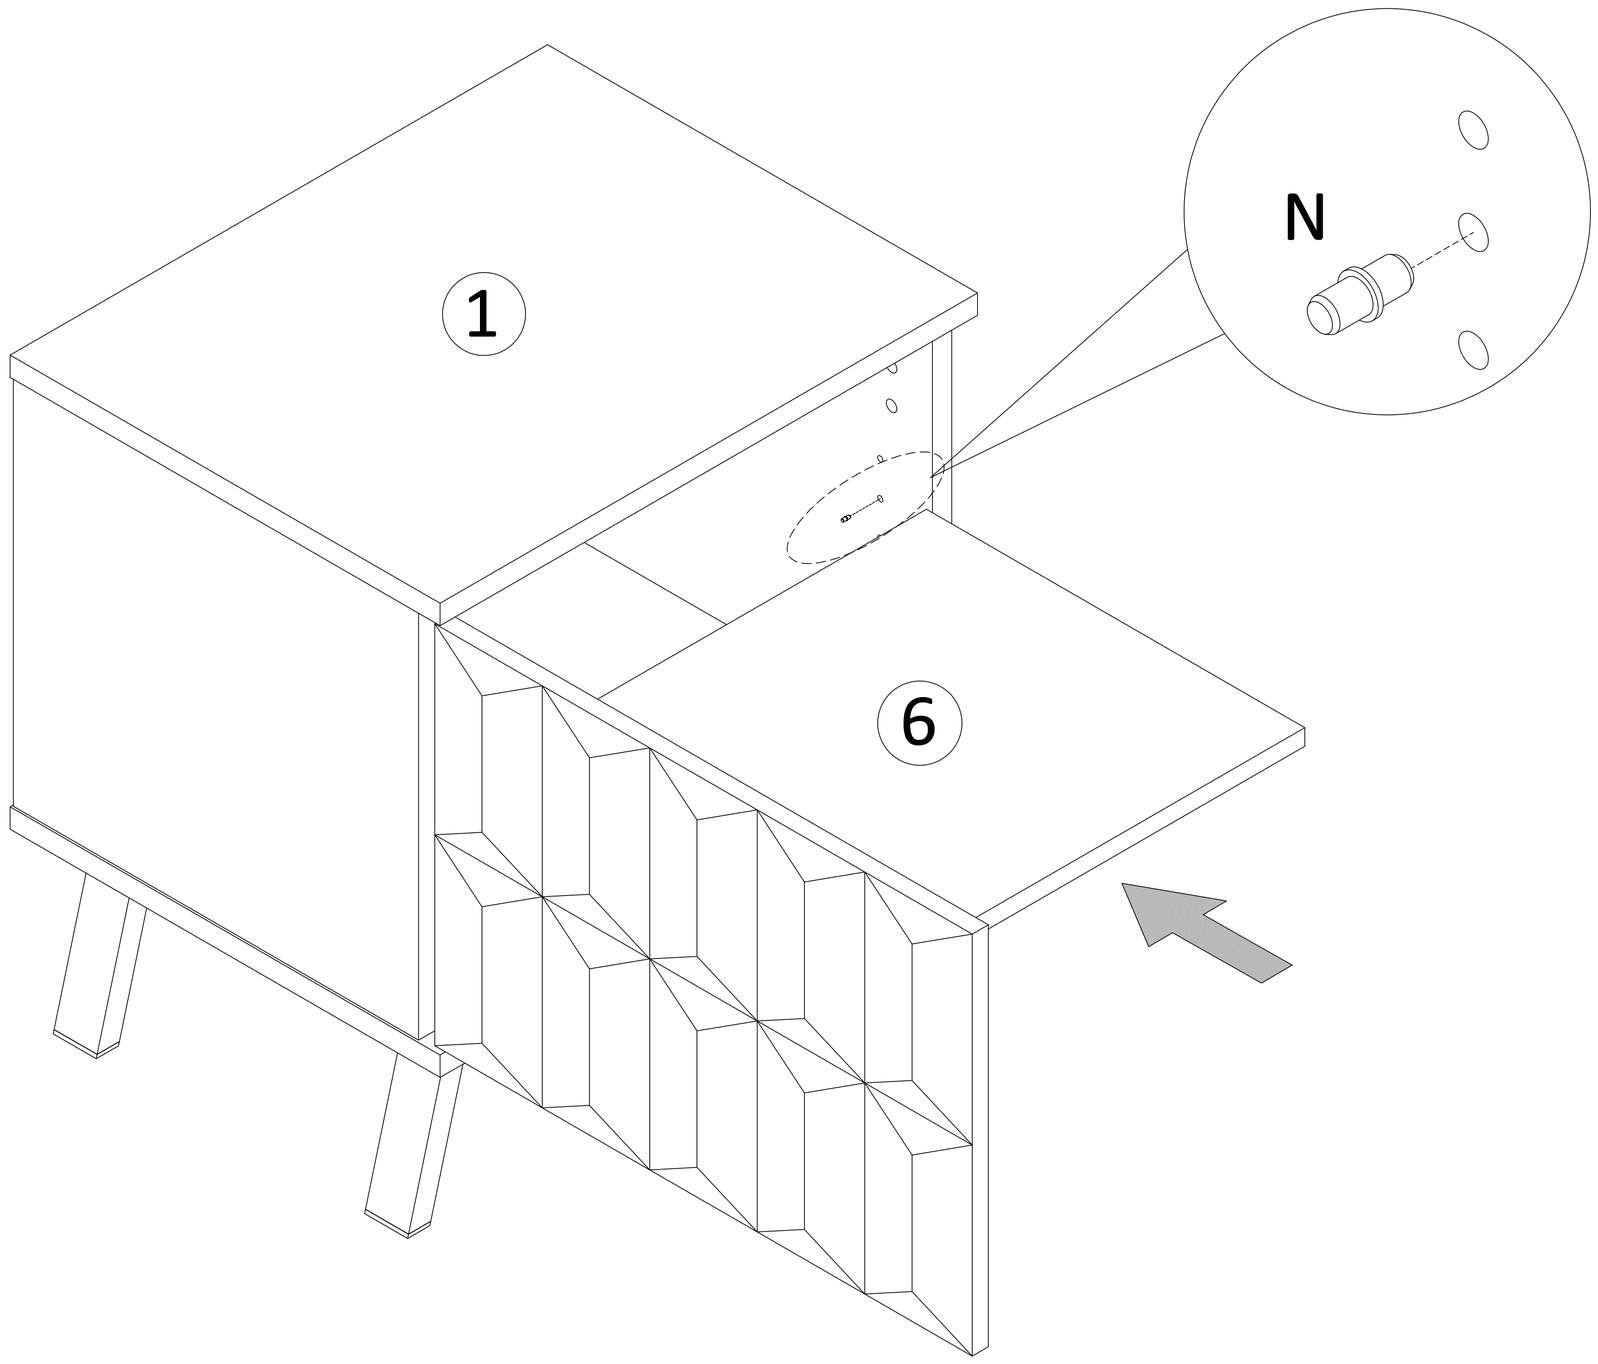

18 NOTE: If the push to open mechanism is not working properly, Simply turn the end of the barrel to adjust.

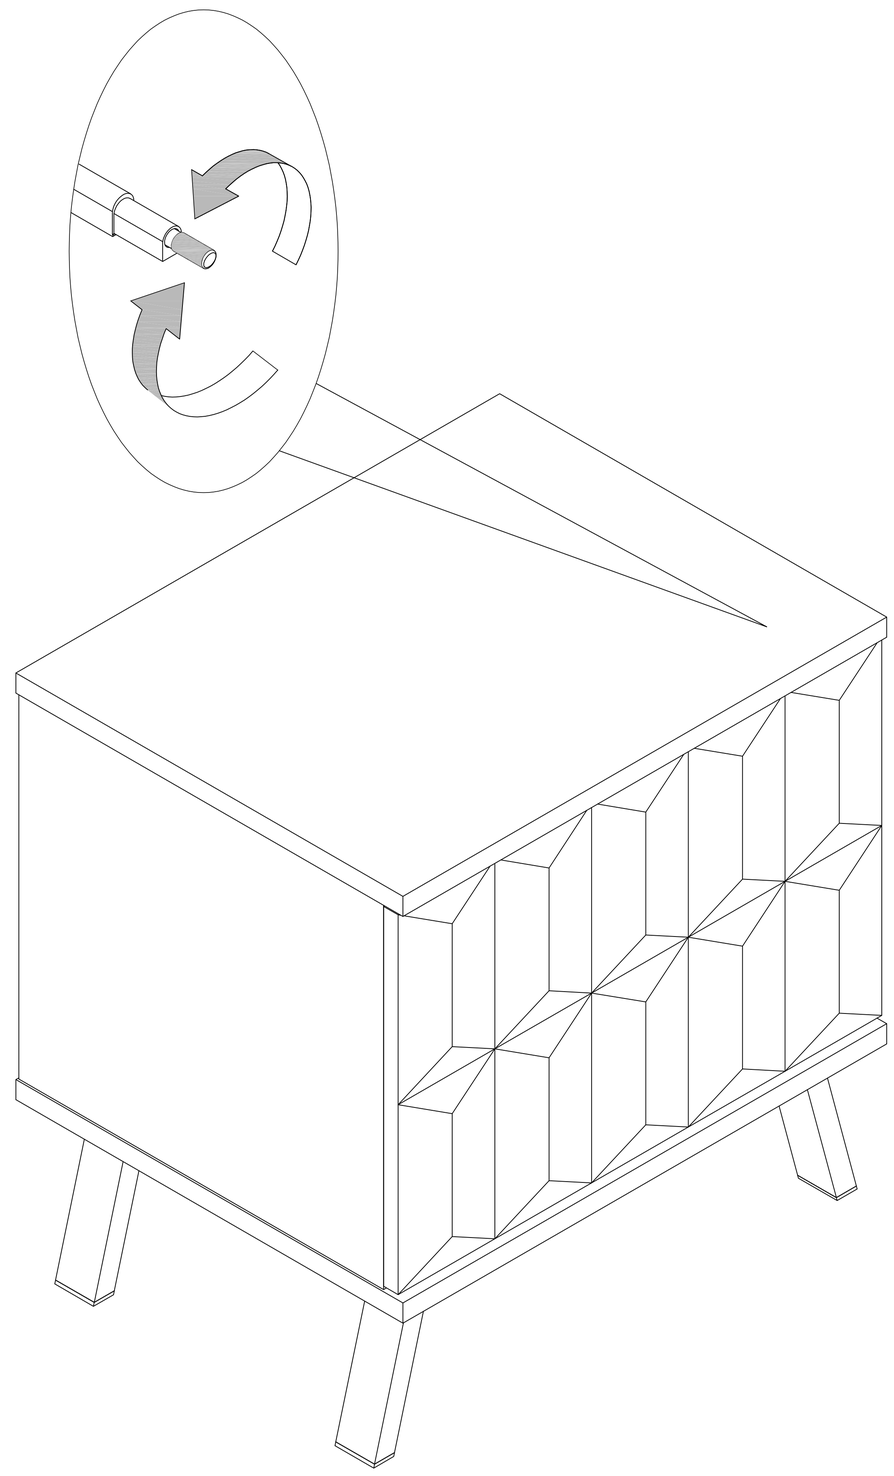

19 Disassembly Instructions

Gently insert Disassembly rod ‘M’ in to the triangle shown in the diagram as ‘KEY’ . Once all the way in, the panels will come apart. Due to the click system, the panels may need a gently ‘nudge or tap ’ to release them.

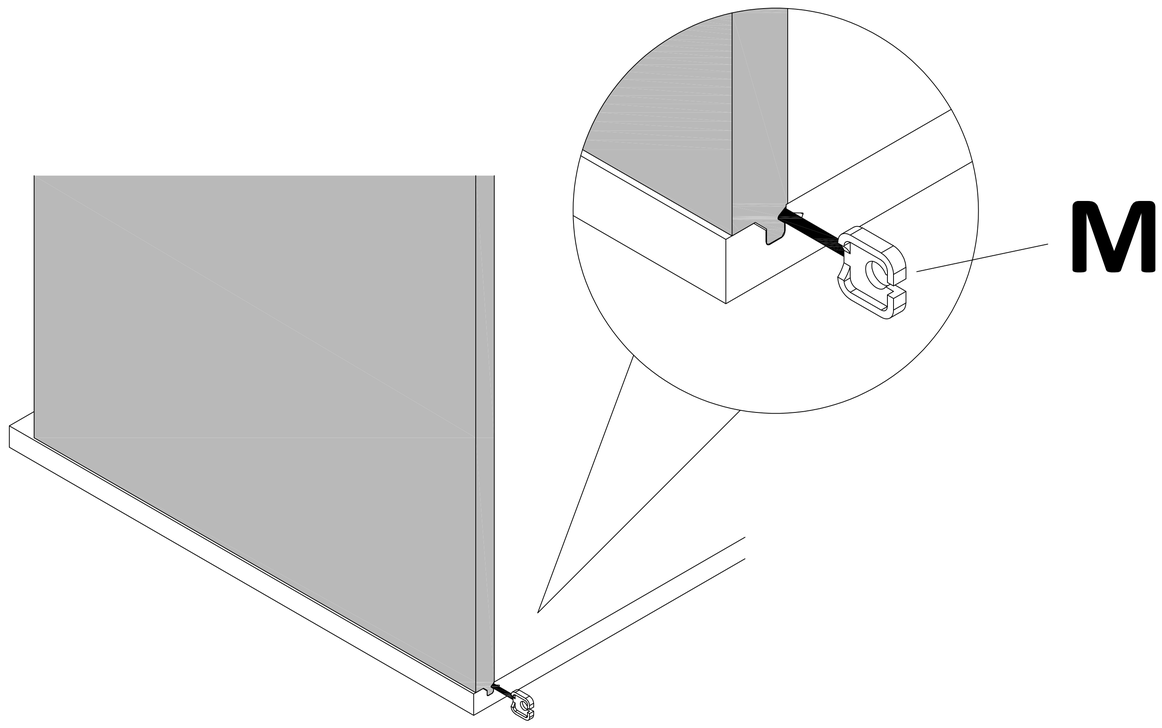

Insert rod ‘M’ into each section panel to disassemble panel at a time

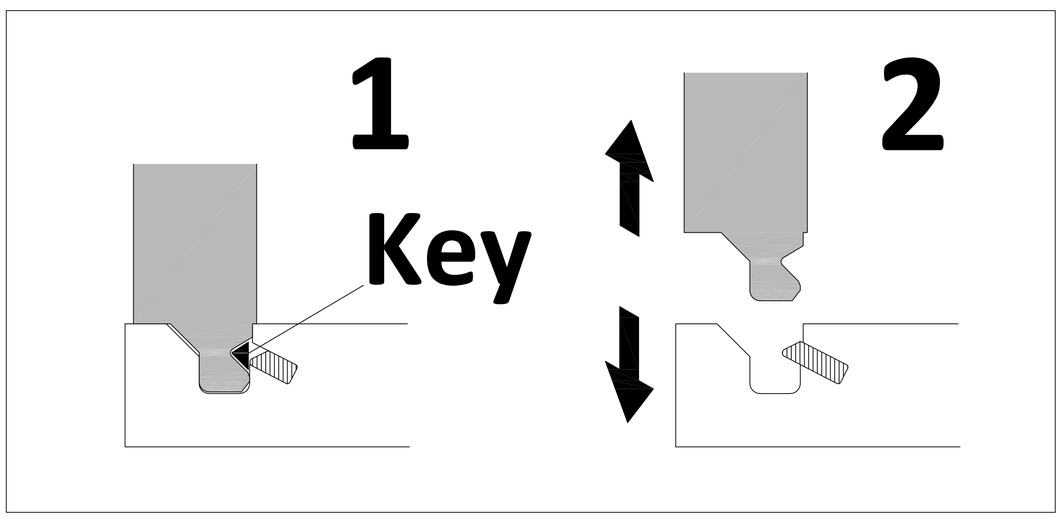

We highly recommend watching the quick help video before disassembling. Simply place a phone camera over the QR code below for a quick link to the video

20

Wall Fixing Installation Instructions: Textile strap

Step 1
Place your product in the final position. Mark the wall with a pencil where corresponding hole will be drilled into wall. Check for hidden gas and water pipes and / or electrical wiring. Drill holes and fit an appropriate wall plug (not supplied) for your wall type. Screw the strap to the wall.
Choose an appropriate screw to secure. If in any doubt please consult a professional.

Note 1
The wall plug and the screw / washer are not supplied as the wall types may vary

Note 2
The require gap between product and the wall is at least 25 mm.

Note 3
The end of the textile straps which are fixed to the wall should be about 25mm lower than the end fixed to the furniture.

CAUTION:
Where wall fixings are supplied it is essential that these are used to provide additional stability in order to avoid the furniture toppling over with risk of injury.

CAUTION:
Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

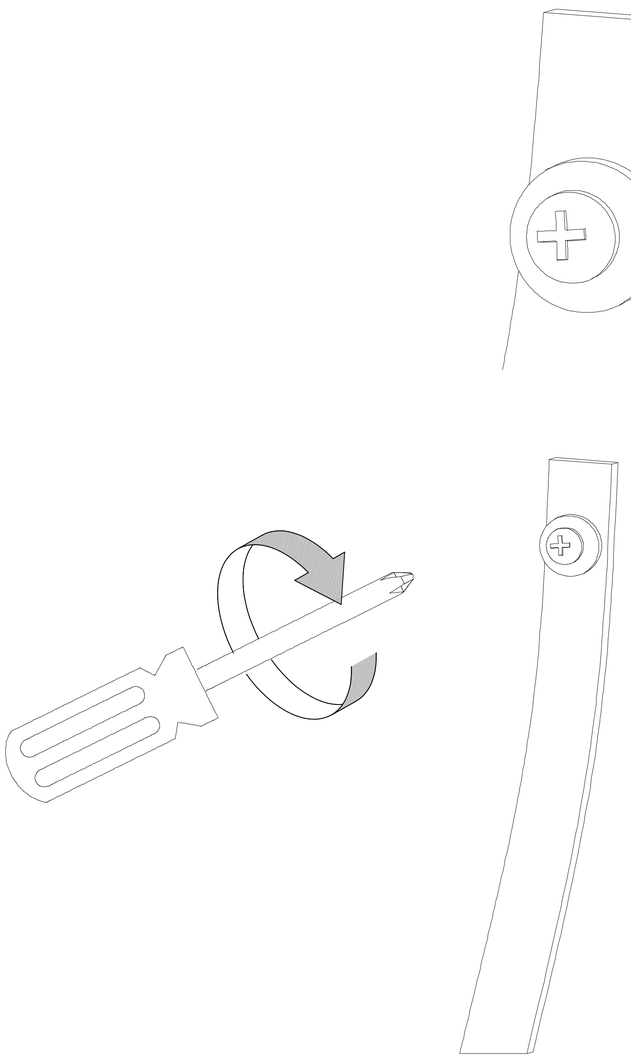

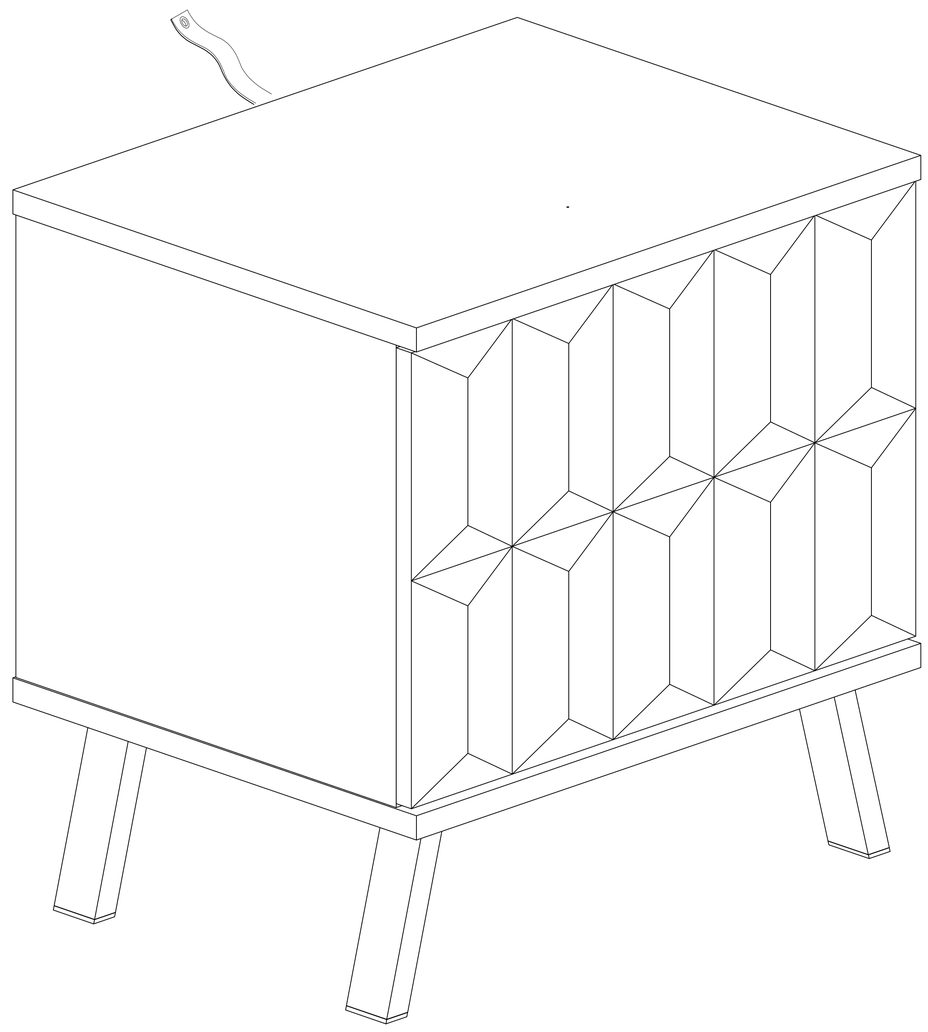

21

Finish - Remove all visible stickers when assembly is fully completed.

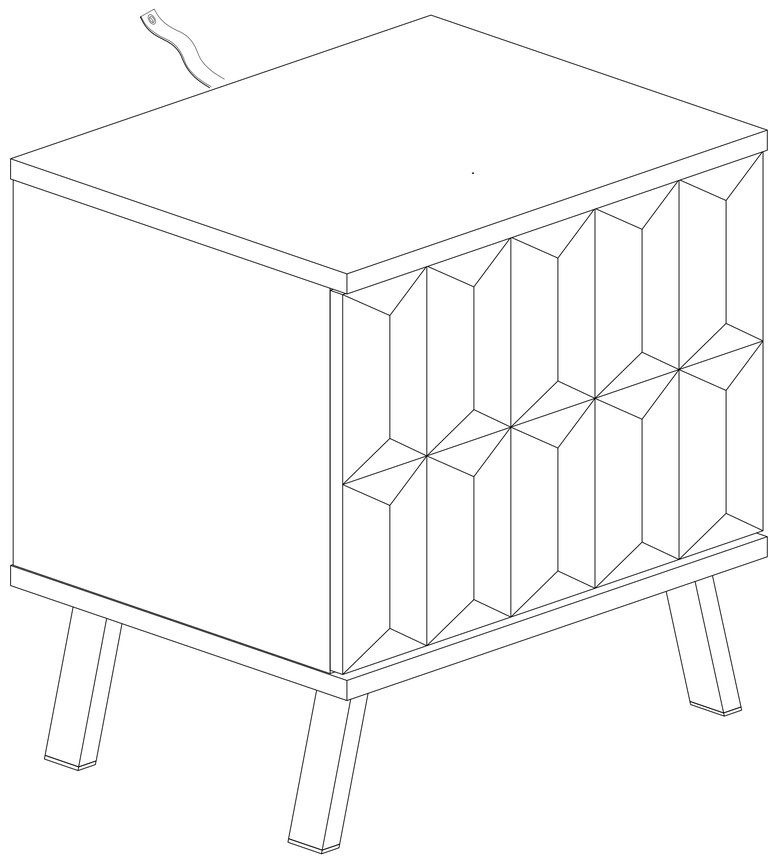

CLEANING ADVICE:
To avoid scratching the surfaces, clean only with a non abrasive cleaner.

NOTES ON SETTING UP WIFI

The LEDS lights only work on **2.4 GHz**, they will not work on 5.0 GHz

Most homes are 2.4 GHz or operate a dual function. If for any reason the LED lights are not connecting to the app or Alexa, please check the router setting. Most routers will operate both 2.4 and 5.00 GHz so there should be no problem.

In commercial premises, there maybe software to block access connection to unknown apps or services. If this happens, please check with IT Department.

The system will work from a mobile WiFi hotspot from one phone to another. We recommend this approach if there are access issues.

Ensure Bluetooth setting is on.

QUICK HELP GUIDE & TIP VIDEOS

LED LIGHT SET UP GUIDES

Pairing mode

Re-setting pairing mode

AP mode

Re-setting AP mode

Simply hold the camera on a smartphone over the QR code above to go to a quick link to the help video
For PSTI (Product Security and Telecommunications Infrastructure) Statement of Compliance please visit the out site on the link below.
https://www.frankolsenfurniture.co.uk/statement-of-compliance